



BFB-3000

BFB-3000 Plus

Set Up and Operations Manual
[Version 3.3]



1 Introduction

Thank you for purchasing your BFB-3000.

Before first use, the BFB-3000 needs careful setting up. The list below illustrates some of the **essential** operations which must be carried out before operation:

- Remove existing prints
- Check the bed is clear of any build material
- Check the bed is fitted correctly
- Power up
- Manual move
- Check the hot-end nozzles are clean from plastic debris
- Check the bed is level
- Check the bed is referenced to the extruder nozzles
- Load the extruders
- Start a print
- Print a successful raft
- Print the first model



Failure to carry out **all** of the set-up procedures contained in this document will damage the machine.

This document has been designed to illustrate the **essential** procedures and get you up and running as quickly as possible. Please take time to understand how the process works and complete each procedure in the order set out in this manual. Setting up can take from 20-60 minutes depending on the skill level of the operator.

Support is available by raising a ticket at www.bitsfrombytes.com

We welcome any feedback you may have, and wish you well in your 3D printing!



2 Table of Contents

1	Introduction	2
2	Table of Contents	3
3	Manual symbols	5
4	How this manual works	6
5	Process overview – how the BFB-3000 works	7
5.1	BFB-3000	7
5.2	Tool kit.....	8
5.3	Creating a 3D model	9
6	Initial set-up.....	12
6.1	Remove existing prints	12
6.2	Check the bed is clear of any build material	13
6.3	Check the bed is fitted correctly	14
6.3.1	Remove the bed	15
6.3.2	Fit the bed	16
6.4	Power up	17
6.5	Manual move.....	18
6.6	Check the hot-end nozzles are clean from plastic debris	20
6.7	Check the bed is level	21
6.8	Check the bed is referenced to the extruder nozzles	28
6.9	Load the extruders.....	31
6.9.1	Load the filament	31
6.9.2	Extruder control	37
6.9.3	Purge the extruder	38
6.10	Start a print	40
6.11	Print a successful raft.....	41
6.11.1	Print the raft check file	43
6.11.2	Examine the raft check file	44
6.11.3	Potential problems	45
6.11.4	Perfect the raft	46



7	Print the first model	47
7.1	Test print	47
7.2	Essential post-print operations	48
7.2.1	Bed flatness	48
7.2.2	Empty material waste bin	49
8	Further printing.....	50
9	Further operations	51
9.1	SD card notes.....	51
9.2	Reloading the extruders	51
9.3	Notes on materials	52
9.3.1	Properties.....	52
9.3.2	Soluble support structure	52
9.3.3	Storage	52
9.4	Control panel functions	53
9.4.1	Run file	53
9.4.2	Extruder mapping.....	53
9.4.3	Manual move	55
9.4.4	Extruder control	55
9.4.5	Home tool head.....	55
9.4.6	Settings.....	55
9.4.7	Set Z height	56
9.5	Maintenance operations.....	60
9.5.1	Updating your printer.....	60
9.5.2	Adjusting the nozzle wipe.....	60
9.5.3	Fine adjustment to level the nozzles	62
9.5.4	Setting the extruder pressure bearings	64
9.5.5	Handling a ground-out filament	67
9.5.6	Handling snapped filament in the delivery tube	69
9.6	Troubleshooting	79
9.7	Specifications.....	79



3 Manual symbols




CAUTION: notes to prevent damage to the machine.



DANGER: notes to prevent injury to the operator.



4 How this manual works

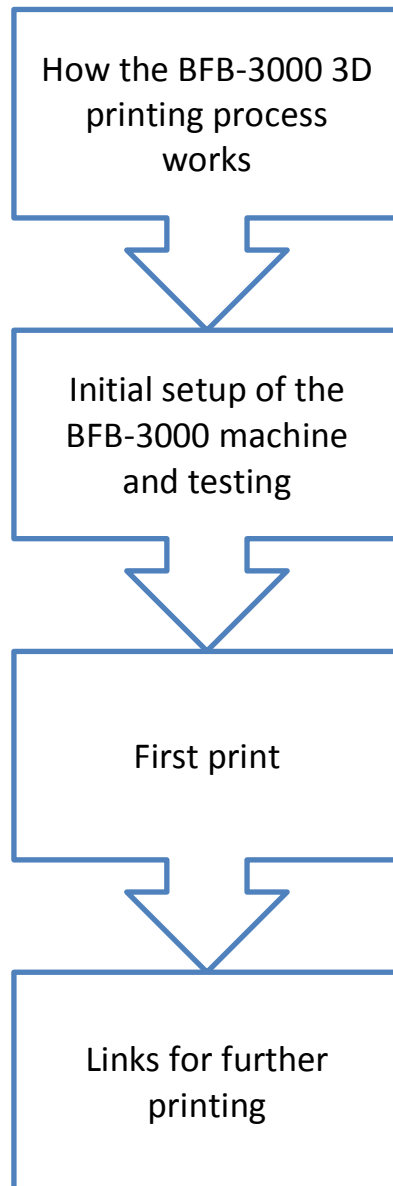




5 Process overview – how the BFB-3000 works

Before reading this section, please ensure that the unpacking instructions have been completed.

5.1 BFB-3000

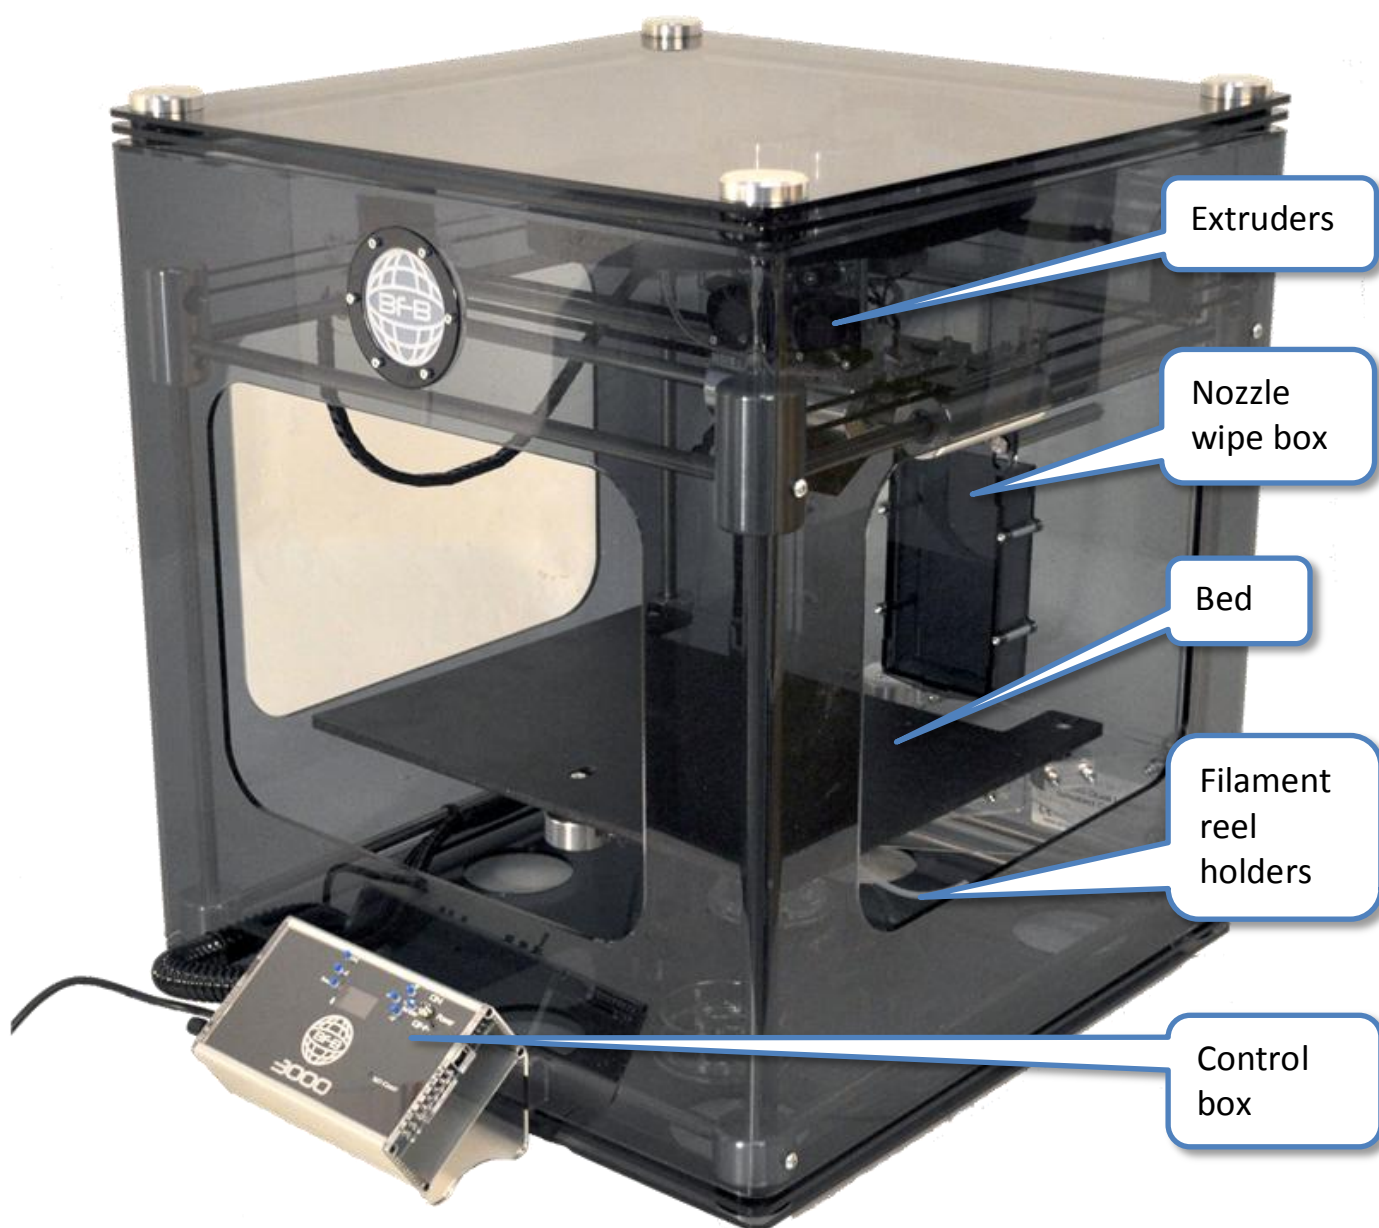



5.2 Tool kit



Model removal tool



Side cutters



Hex drivers



1.5mm Allen Wrench



Ø0.5mm drill bit



Ø3mm drill bit



SD card



Pliers




8mm spanner







5.3 Creating a 3D model


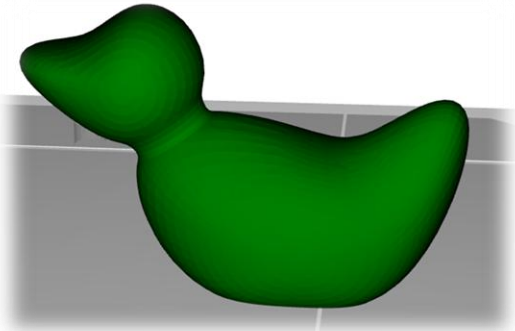
CAD software
Draw your object in your 3D modelling package ¹


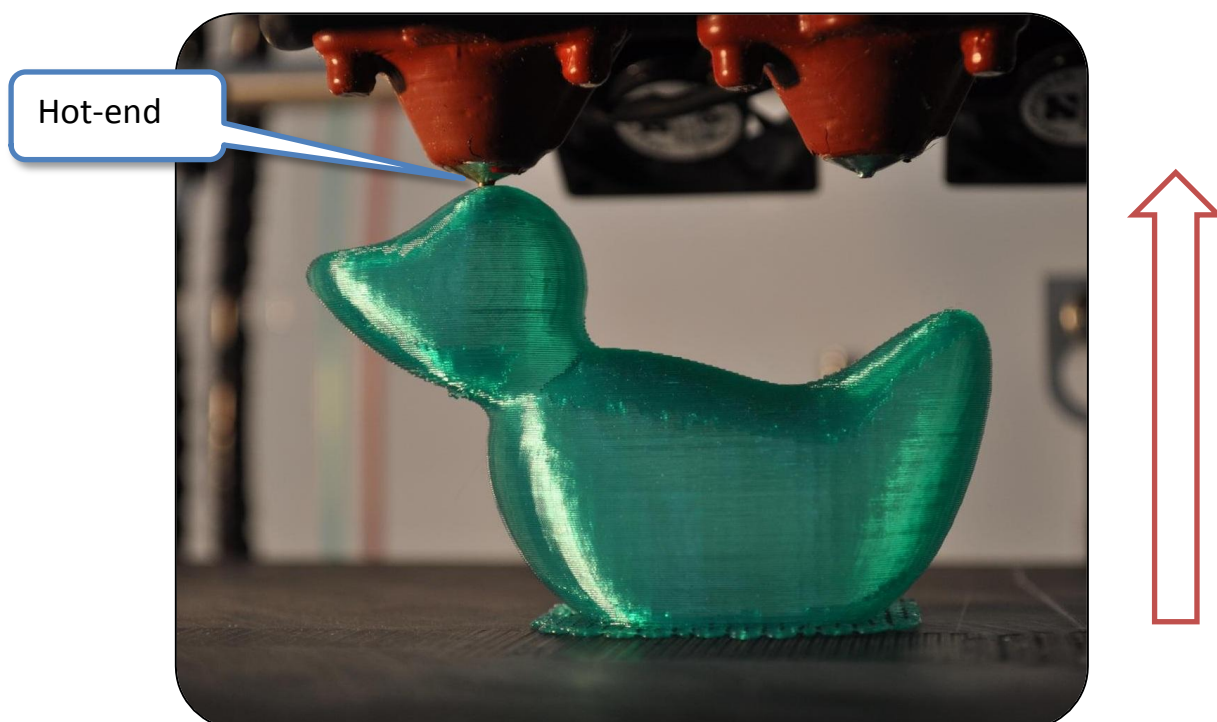


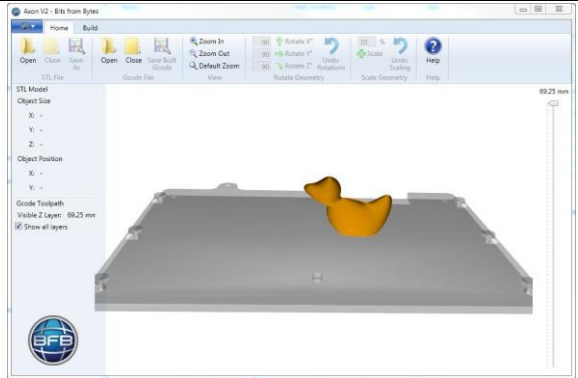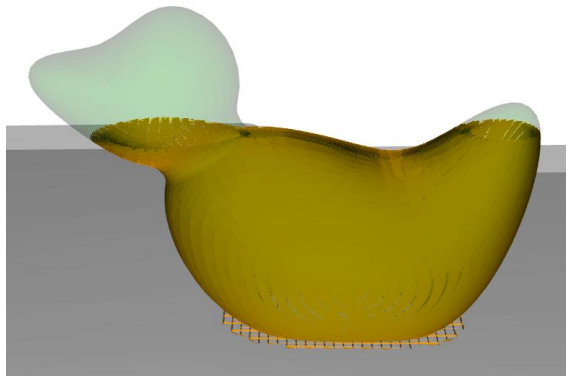BFB "Axon"
Load your model into Axon to automatically process the file.



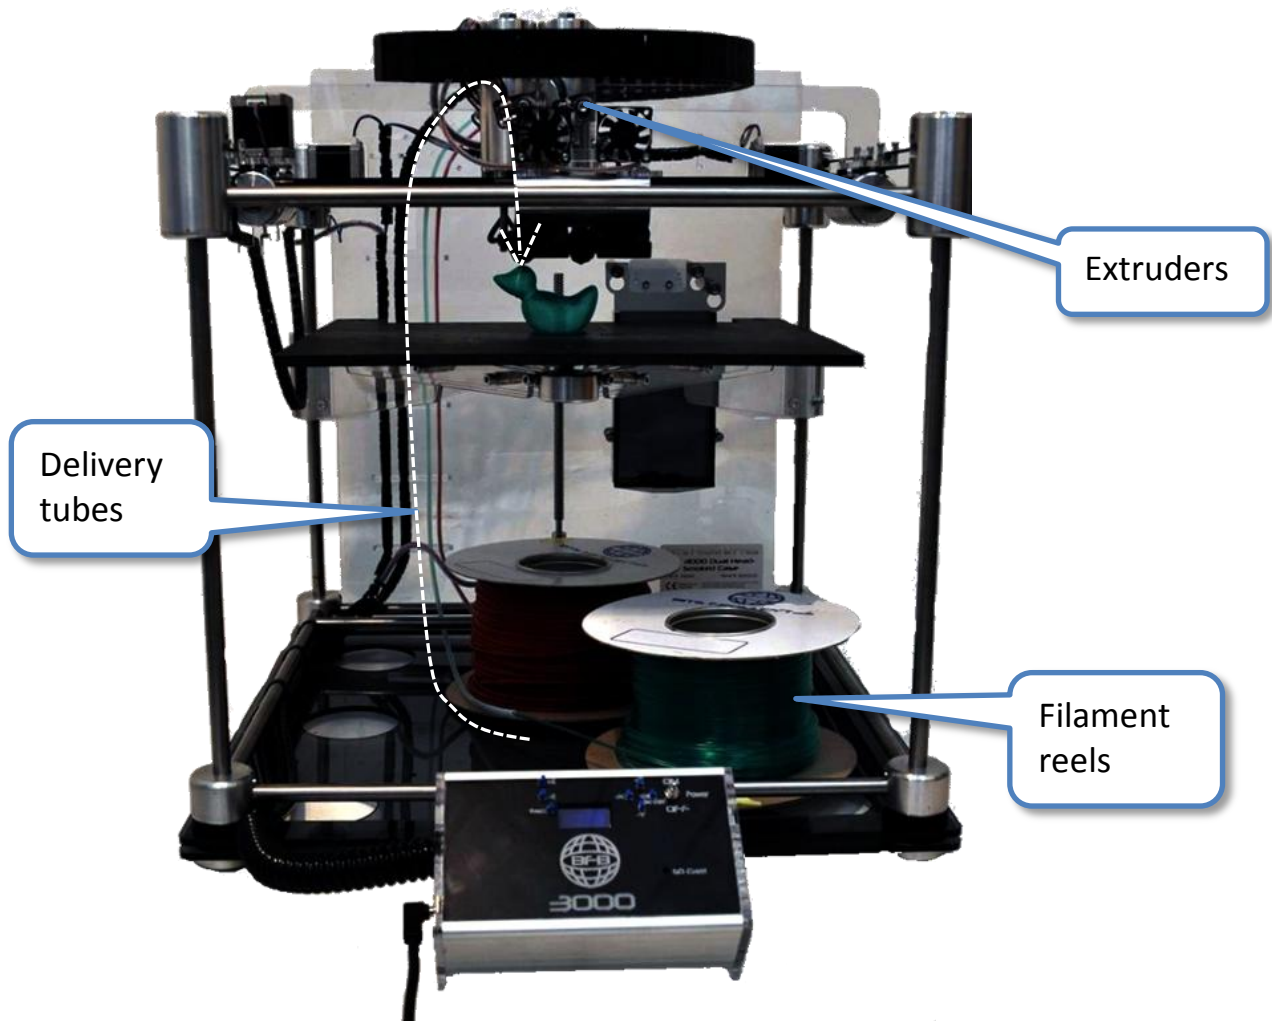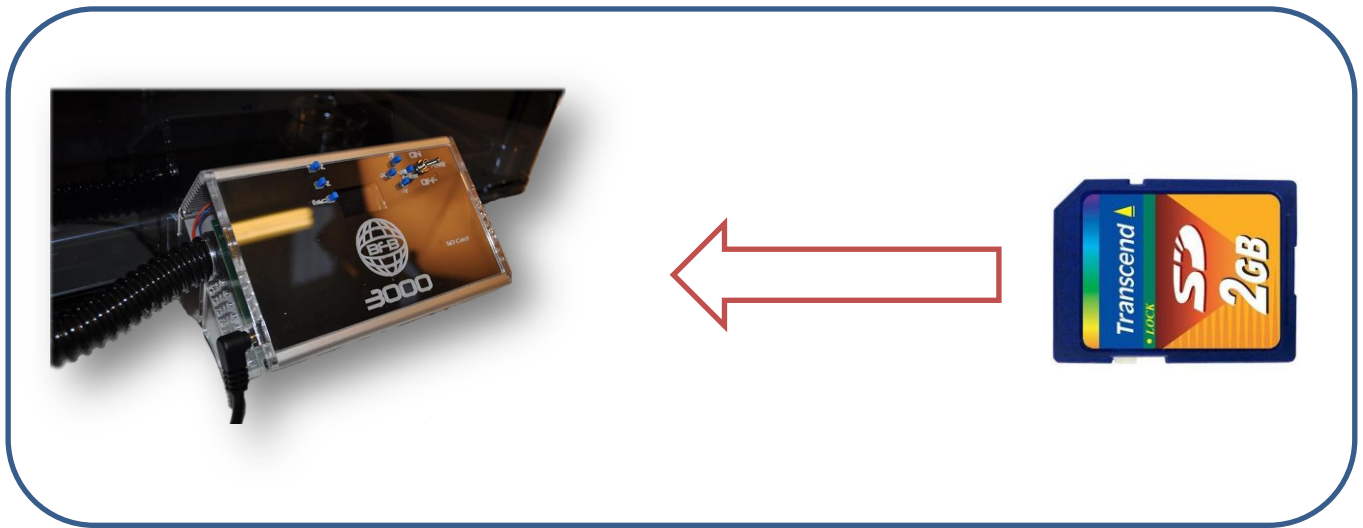

¹ Most CAD packages export to STL format. However, STL quality depends on the CAD package. Poor quality STLs may need repairing before loading into "Axon". STL fixing programs are readily available (e.g. NetFabb).





The extruders pull filament from the reel via the delivery tubes and drive through a hot-end to produce a thin molten filament of plastic. The extruder draws each layer with this filament. After each layer is produced the bed increments down so that a new layer can be drawn on top of the last, building up the 3D model. A second (optional) extruder automatically prints support filament for printing overhanging-features.




6 Initial set-up

Follow all the steps in this section to ensure that the printer is correctly setup before printing.

6.1 Remove existing prints

We do test prints on each BFB-3000 as part of our quality control. We leave these on the print bed to show that the printer has been checked, and to demonstrate some basic prints.


Remove any previous prints with the model removal tool. Slide the edge between the bed and the first layer to remove the entire print.

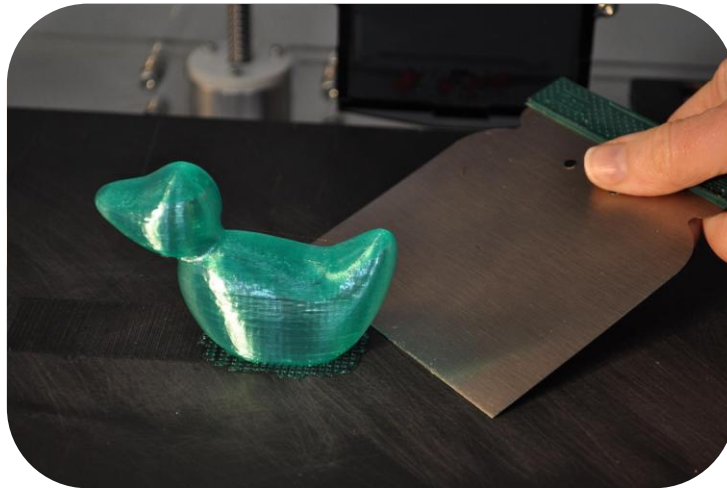

If the model is difficult to remove from the bed in situ, you can take the whole bed out of the machine to make the removal process easier (refer to “Remove the bed”, page 15).



6.2 Check the bed is clear of any build material

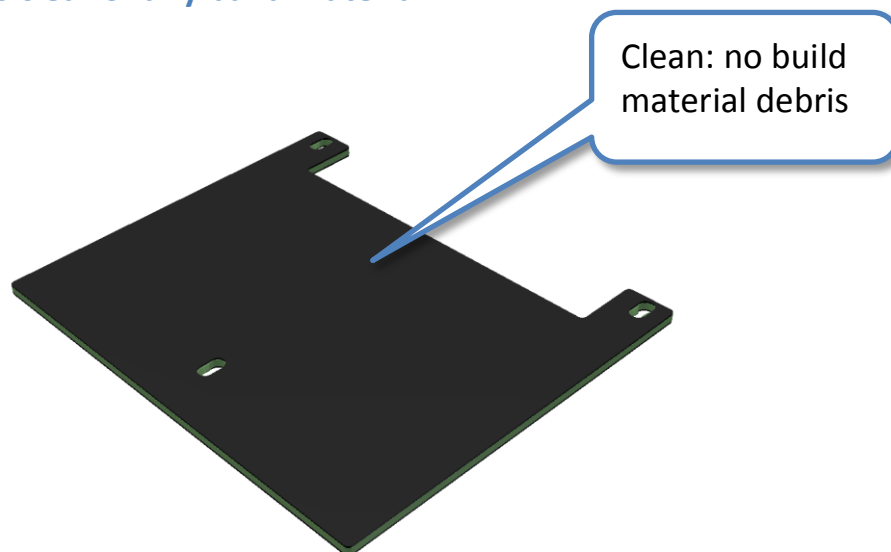


Ensure that all build material is completely removed from the bed. Use the model removal tool to remove any stuck-fast tracks.



It is normal for prints to leave marks on the bed, and for the model removal tool to lightly scratch the surface of the bed. This will not affect the printer's operation. However, take care to avoid gouging the surface with the material removal tool – the bed must be flat.



6.3 Check the bed is fitted correctly

Ensure that bed is correctly fitted to the printer. The three bed bolt heads should sit flush in the countersinks. If not, remove the bed, then refit it - as shown in the next two sections.

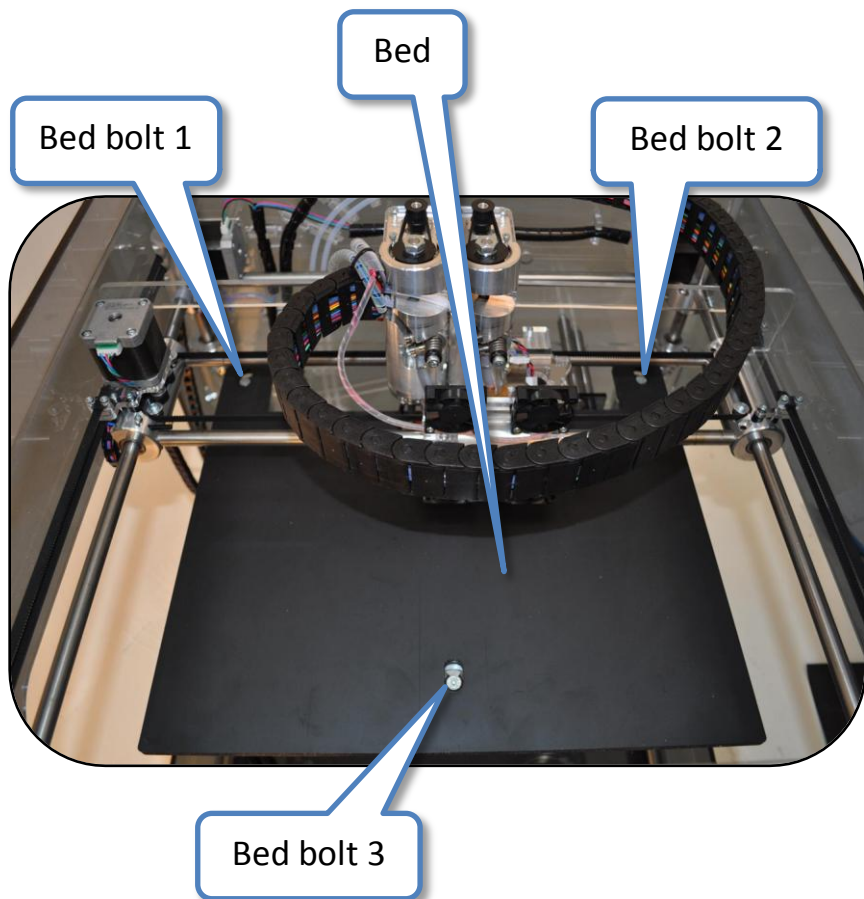



6.3.1 Remove the bed

- Tip: removal is easier if the bed is near the bottom of the machine. If it is too high, you can manually lower the z-axis (see “Manual move”, page 18).

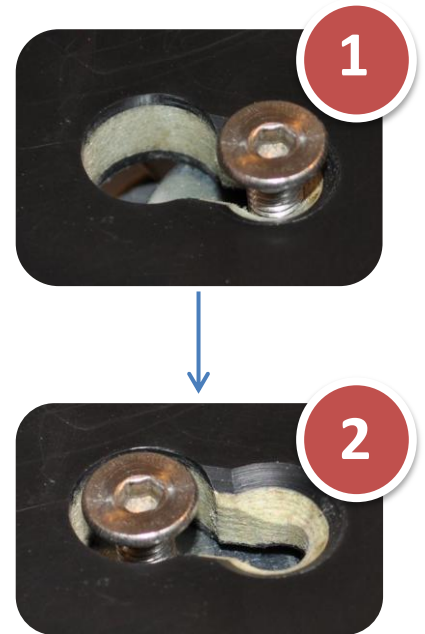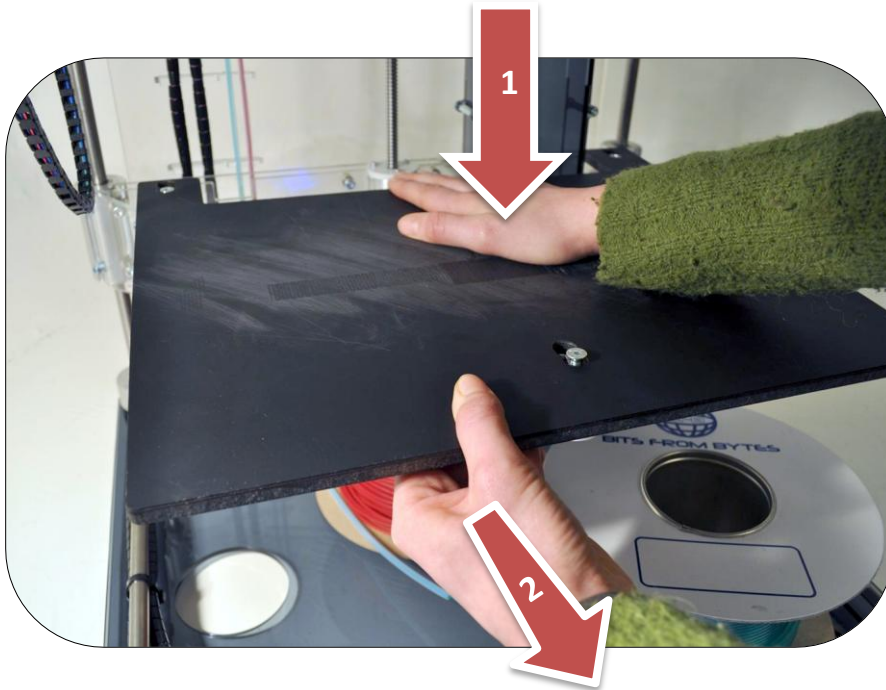

6.3.2 Fit the bed

- Tip: fitting is easier if the bed is near the bottom of the machine. If it is too high, you can manually lower the z-axis (see “Manual move”, page 18).
- Check all bolt heads are fitted correctly (see “Check the bed is fitted correctly”, page 14).

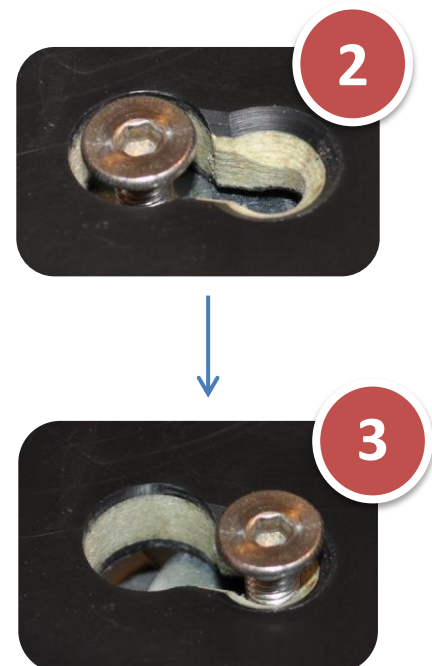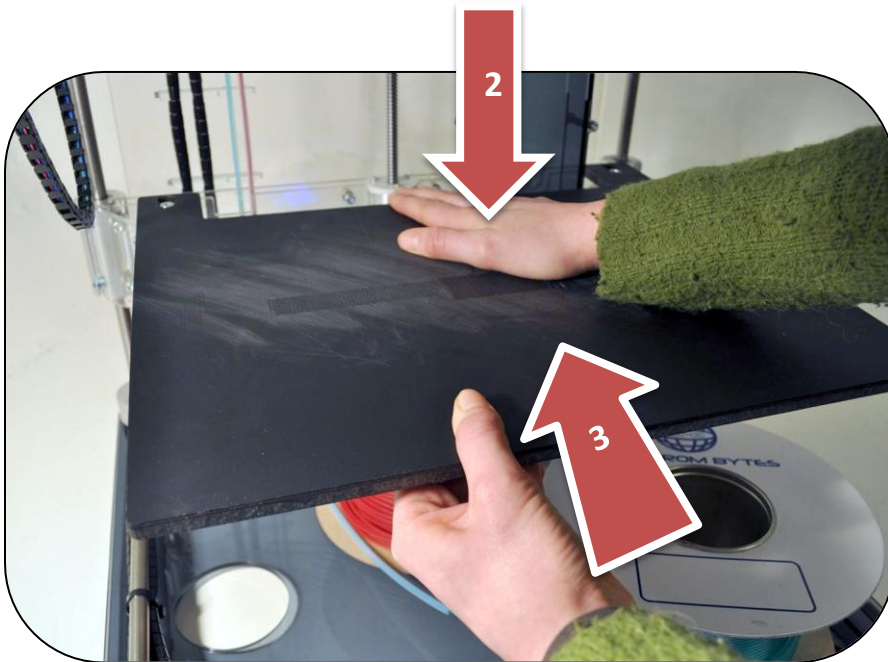



6.4 Power up

- Connect the power supply from the control panel into the power socket shown in Figure 1. Turn the supply on. Turn the control box on using the power switch shown in Figure 1.

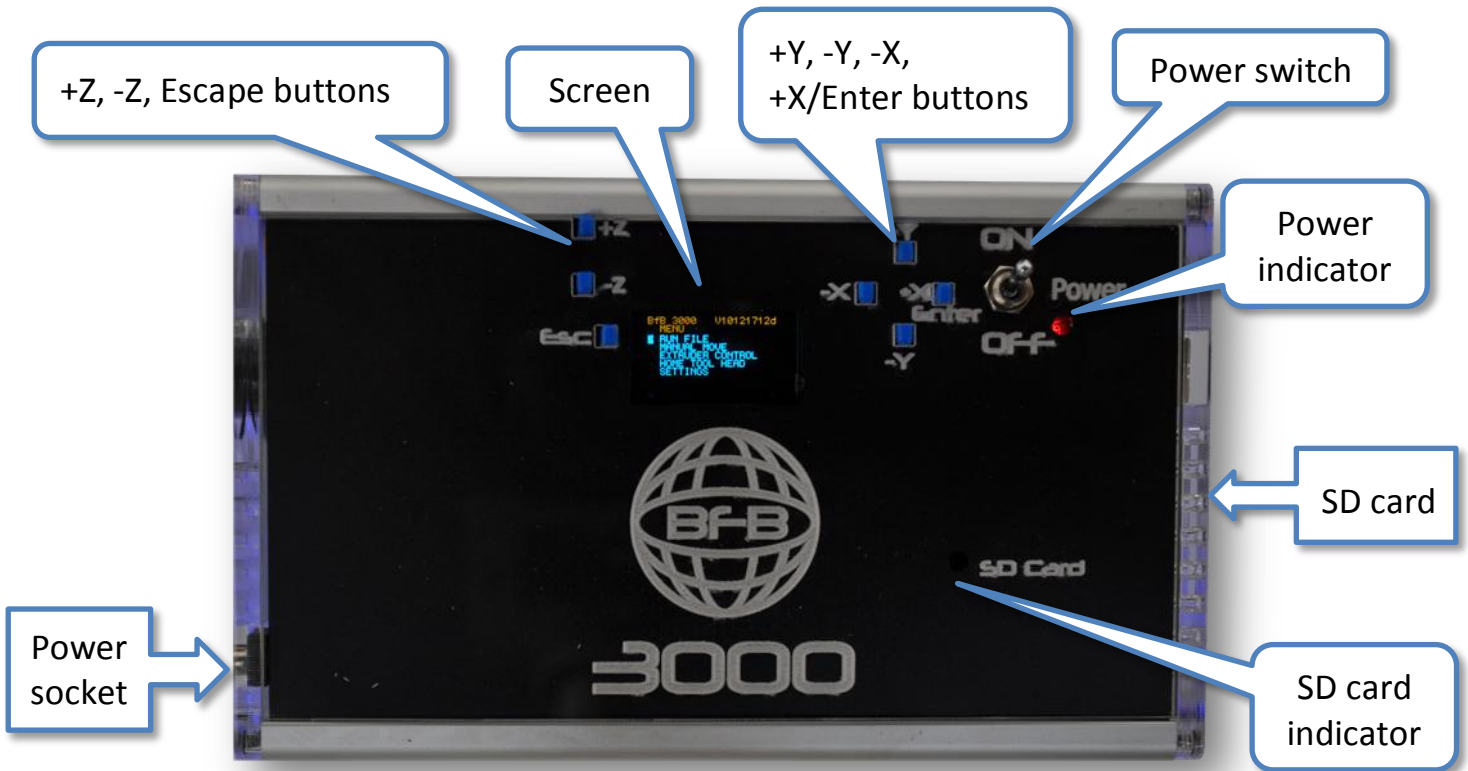


Figure 1: Control panel

Table 1: Buttons used for navigation

Button	Screen Navigation
+Y	Up
-Y	Down
+X	Enter
Esc	Escape
+Z	Extruder selection up (see 'Extruder control', page 36)
-Z	Extruder selection down (in 'Extruder control', page 36)



6.5 Manual move

Get familiar with moving the axes around:

- Ensure that the bed is fitted properly to the machine (see “Check the bed is fitted correctly”, page 14).
- Using the buttons on the control panel (see “Power up”, page 17) select the ‘Manual move’ function and press enter:

```

RUN FILE
EXTRUDER MAPPING
> MANUAL MOVE
EXTRUDER CONTROL
HOME TOOL HEAD
SETTINGS
    
```

- Use X, Y and Z buttons to move each axis respectively (axes designated in Figure 2, page 19).



Caution: Always move the Z axis first to ensure that bed is away from the extruder nozzles, and does not collide during an X/Y move. Collisions between the extruder nozzles and the bed may damage both.



Caution: Observe each X/Y axis movement. In these axes, it is possible to drive the extruders too far away from the “Home” position (Figure 2) into the printer frame. Avoid this. Excessive collisions will damage the printer.



Caution: Observe each Z axis movement. In this axis, it is possible to drive the bed too high (into the extruder nozzles) or too low (into the motor coupling). Avoid this. Excessive collisions will damage the printer.

- Press Escape to leave the function, and return to the main menu.


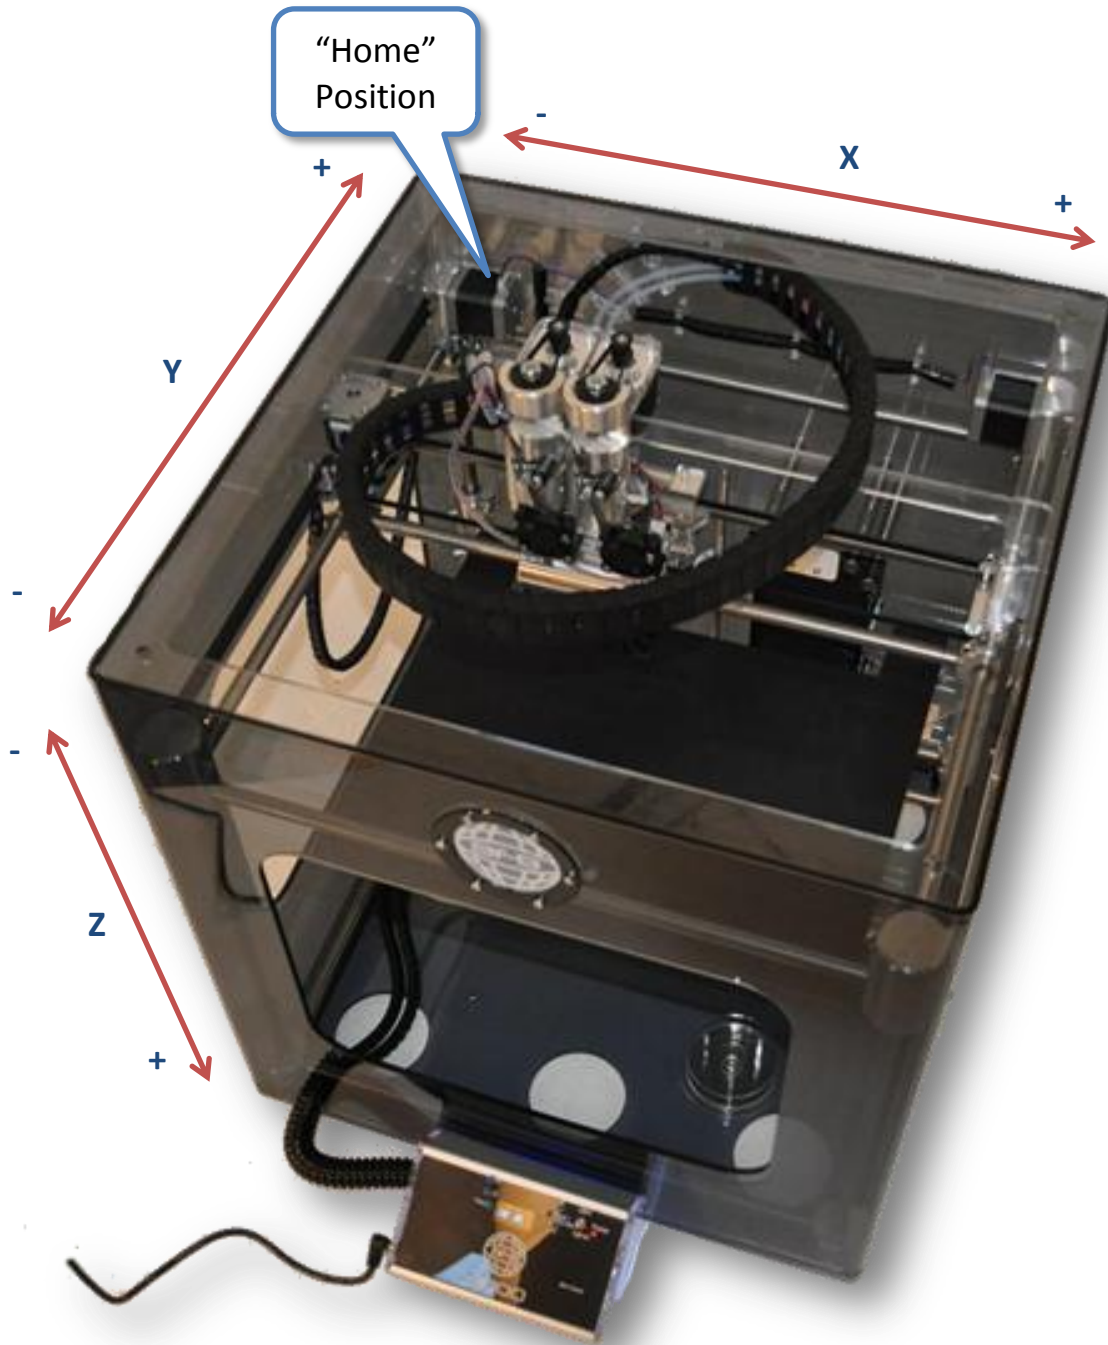


Figure 2: Axis designation for the BFB-3000

6.6 Check the hot-end nozzles are clean from plastic debris

Ensure that the metal nozzle tips are clean from any plastic debris. All tips should be clearly visible.

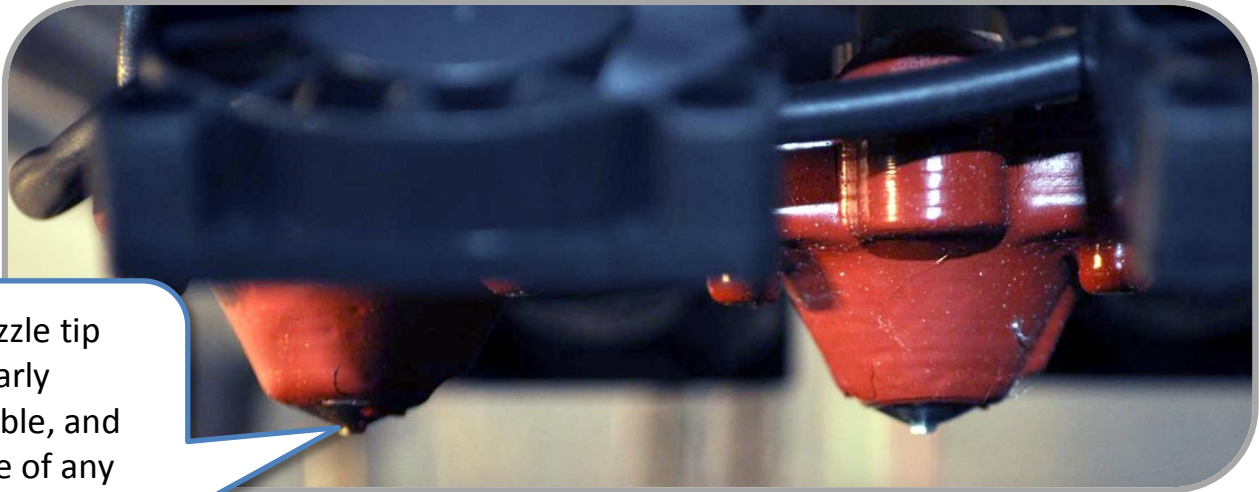

Nozzle tip clearly visible, and free of any plastic debris

If not:

- Lower the bed to make access to the nozzles easy.
- Position the extruders in approximately the middle of the machine (see “Manual move”, page 18), to make access to the nozzles easy.
- Pull away any light plastic debris away from the nozzle tip using the pliers.
- If plastic debris is stubborn, you may need to heat the extruder to make the plastic soft enough to remove. To heat the extruder up, please refer to “Extruder control” (page 36).




Caution: When heating up nozzles to remove plastic debris, **do not touch** the nozzle tips with your fingers. Extruders will burn if touched when hot.

6.7 Check the bed is level

To get a good print, the bed must be level.


We make every effort to level the bed before the machine leaves our factory. However, the bed may move in transit, therefore it is essential to check that the bed is still level.

The print bed is mounted on three sprung bolts which allow adjustment of the bed height in three places.

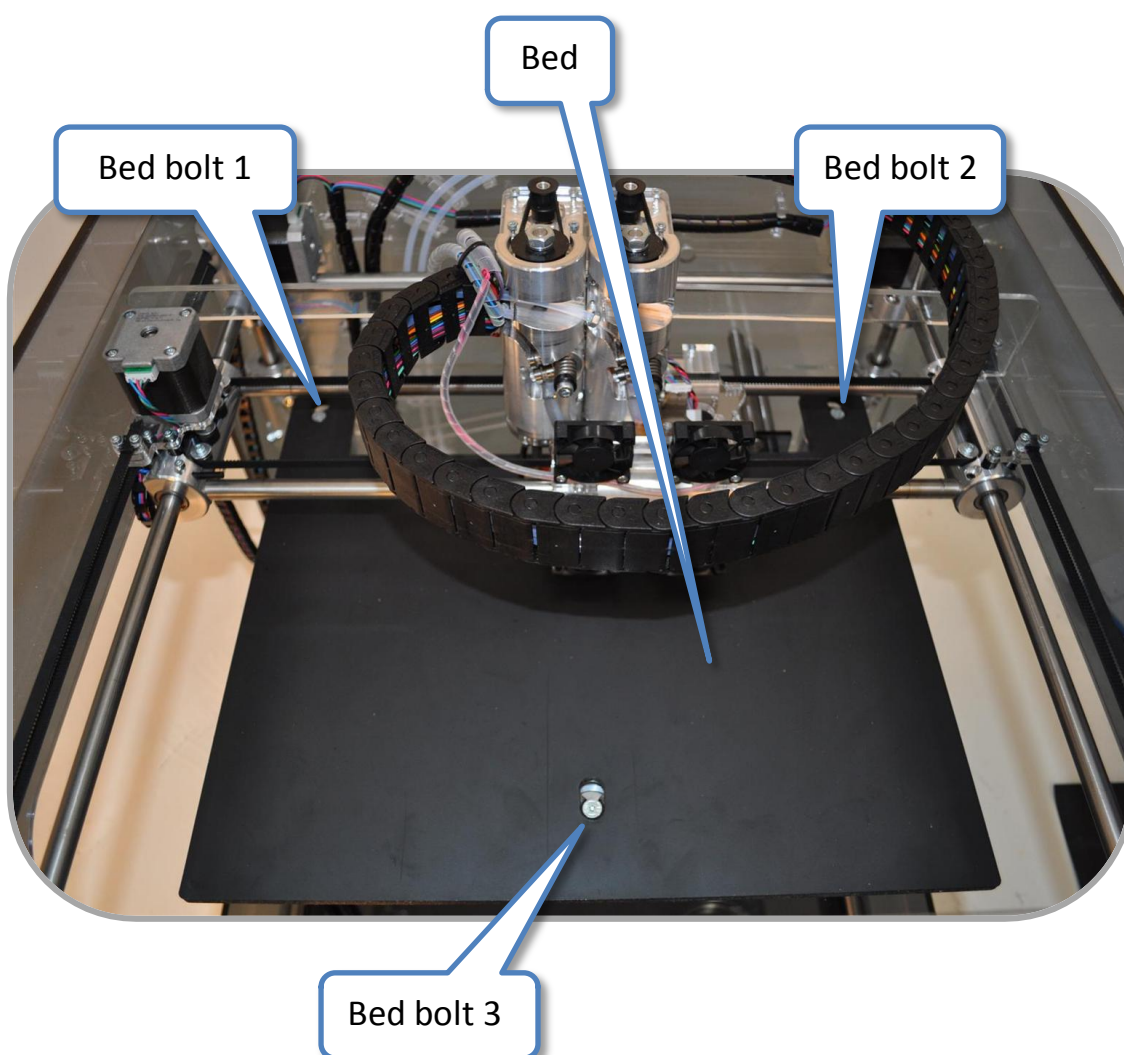


The 'Level Bed' function moves the extruder carriage around the corners of the bed so the operator can adjust the bed bolts to achieve a level bed.

- Check the bed is fitted correctly (page 14).
- On the control panel select 'Settings', 'Level Bed' function and press enter:

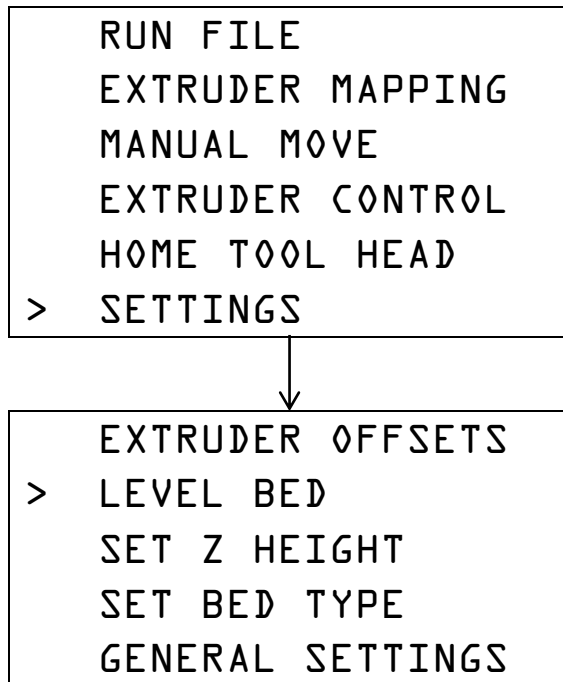

- Press Z+/- to raise the bed to adjust the gap between the hot end and bed. Start with approximately 10 mm distance between the nozzle and the bed. This will enable rough levelling.

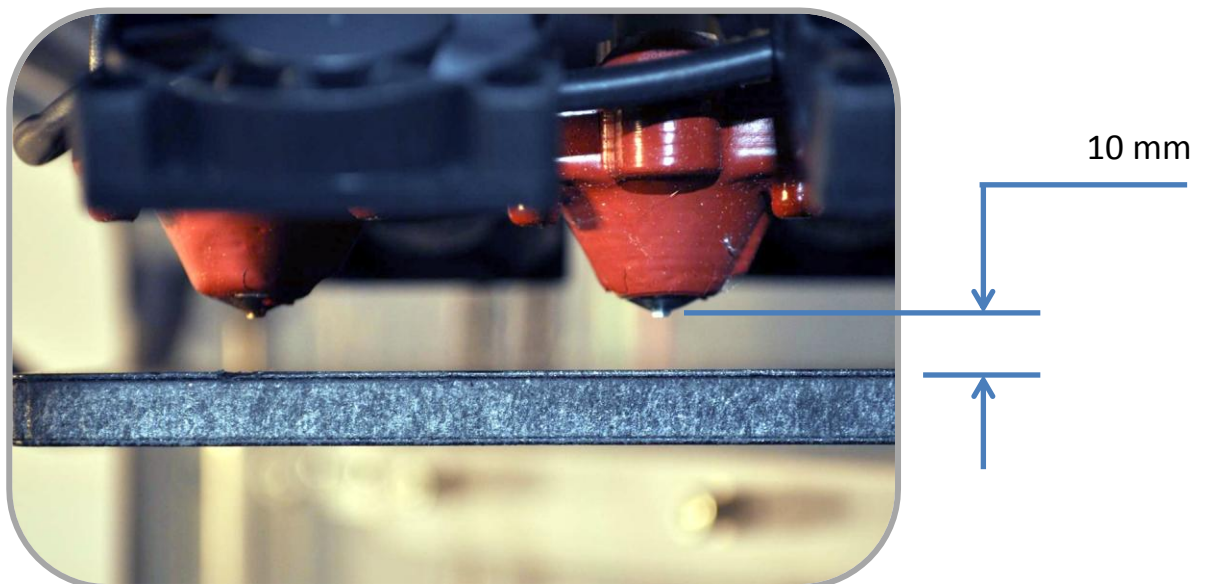

- Press the X+ and X- buttons to automatically move the carriage around the corners of the print bed (view on-screen instructions for more movement options).
- During each movement along the side of the bed, observe from the side of the machine any change in distance between the bed and extruder's hot-end as it moves along.

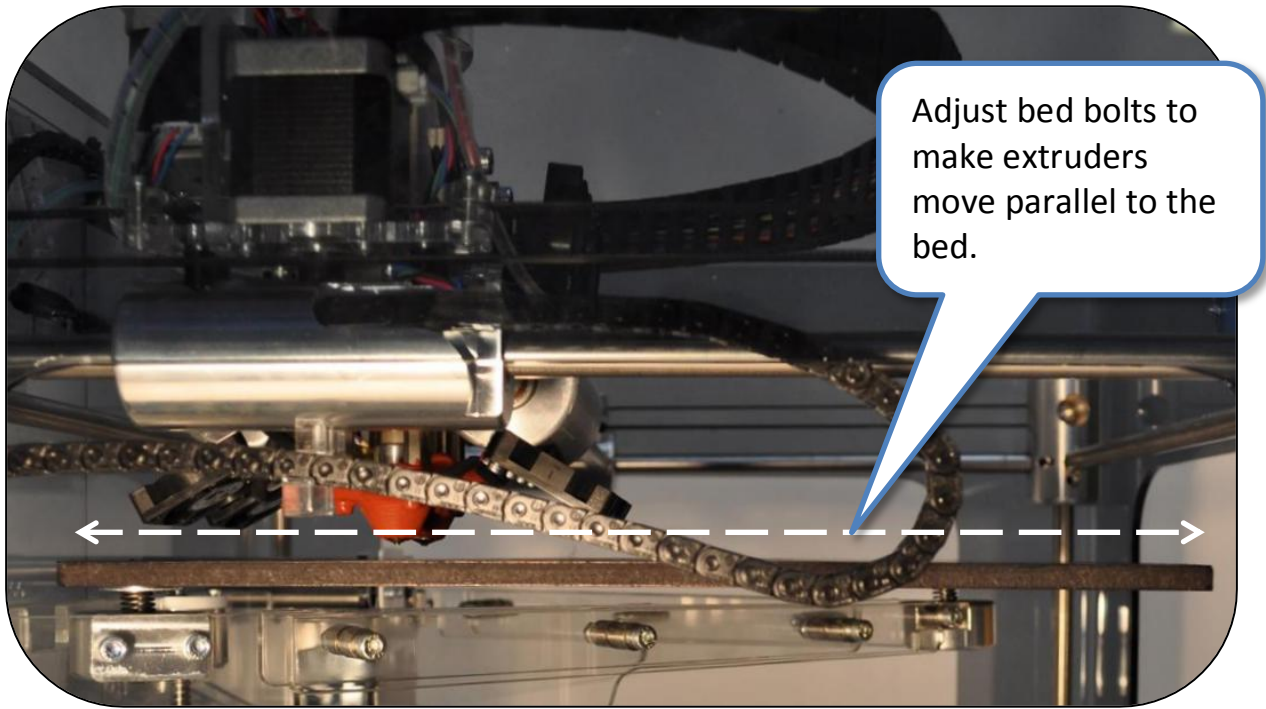


Figure 3: Levelling bed along the Y axis, viewed from the side


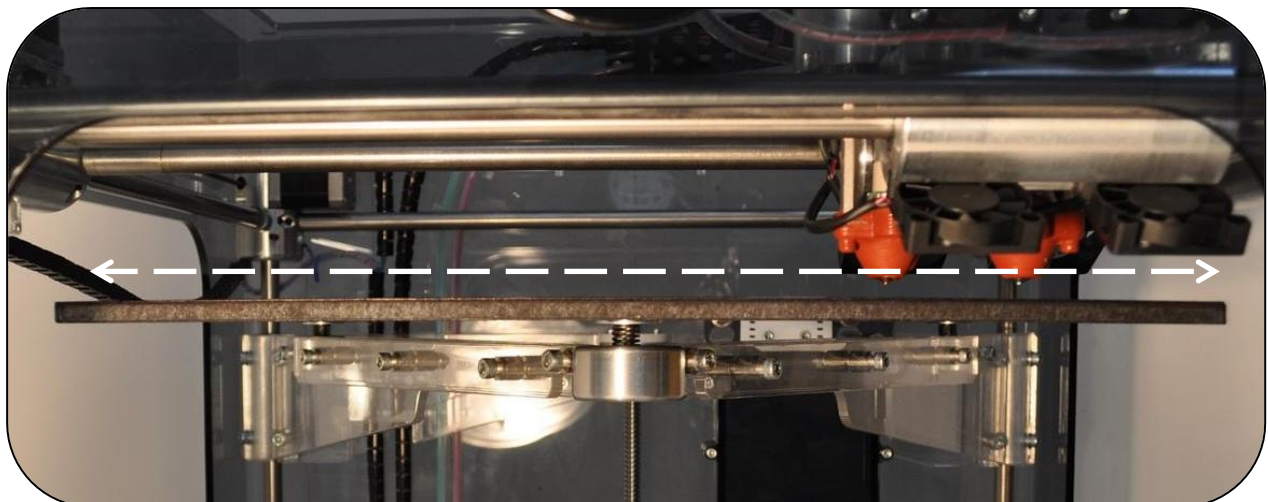


Figure 4: Levelling the bed along the X axis, viewed from the front



- Adjust the height of the bed bolts to make each side level using the 3mm hex driver from the toolkit.
- Underneath each of the 3 bed bolts is a locking nut which must be loosened with the 8mm spanner before the bolt can be adjusted.


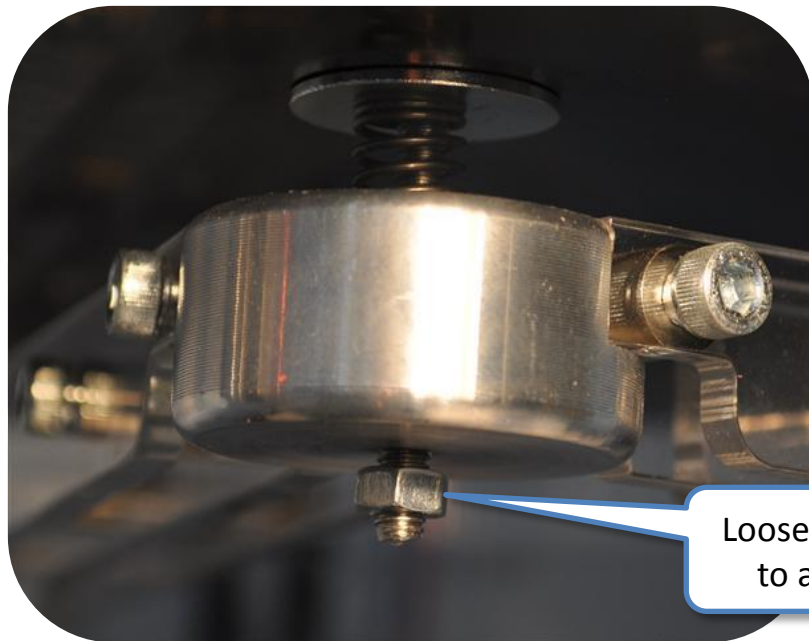


- It may take several movements of the extruder, and consequent bolt adjustments to ensure that the bed is level.




- Ensure that axes are checked from the appropriate side of the machine (to better judge flatness):


PHOTOGRAPHS TAKEN FROM ABOVE

View the movements in the X axis from the front of the machine.

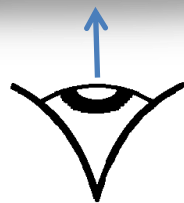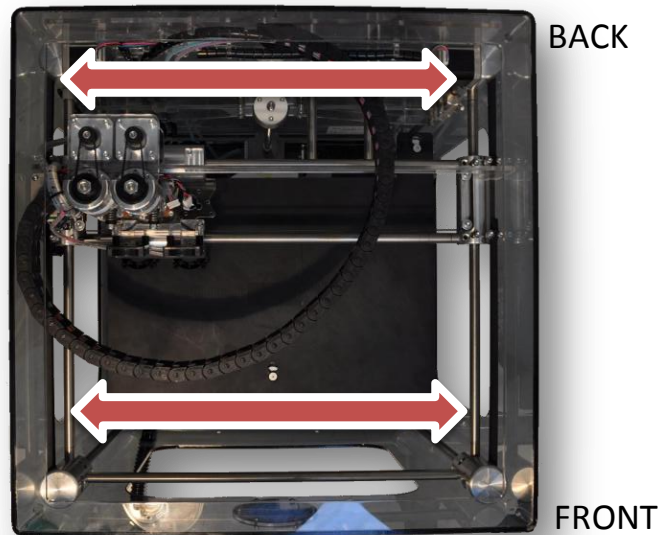

View the movements in the Y axis from the sides of the machine.

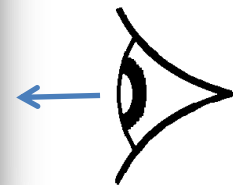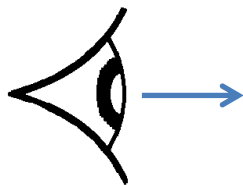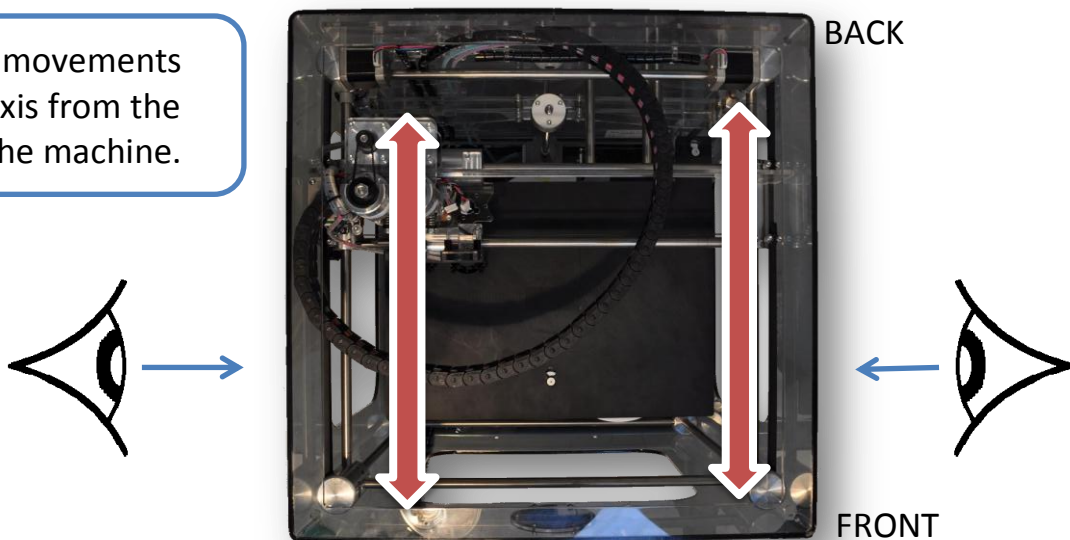

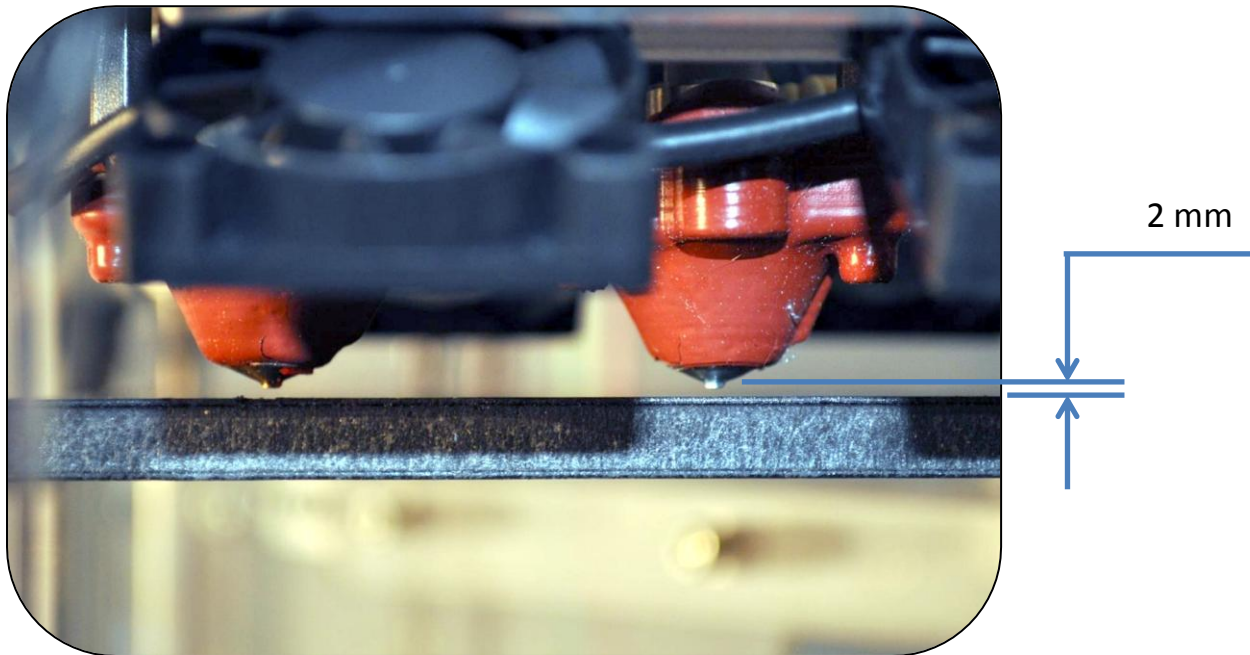

- Press Z+ to reduce the gap between the hot end and bed to approximately 2 mm. This will enable finer levelling.
- Repeat the levelling process.




Caution: Observe each extruder movement. The nozzle should not touch the bed. Moving the extruder with the nozzle touching the bed will damage the nozzle and the bed. If the nozzle touches the bed, immediately lower the bed using the Z- button.

- Finally, check the centre location of the bed by pressing Y+. This can be used to identify an excessively worn or warped print bed as the height in the middle will differ from the perimeter of the bed.
- Press Escape to leave the function, and return to the main menu.



- Remember to lock the 3 bed bolts in position by tightening the lock nut under each, using the 8mm spanner. Whilst tightening the nut, make sure that the bolt does not spin by holding it in position with the 3mm hex driver, from the top side of the bed.

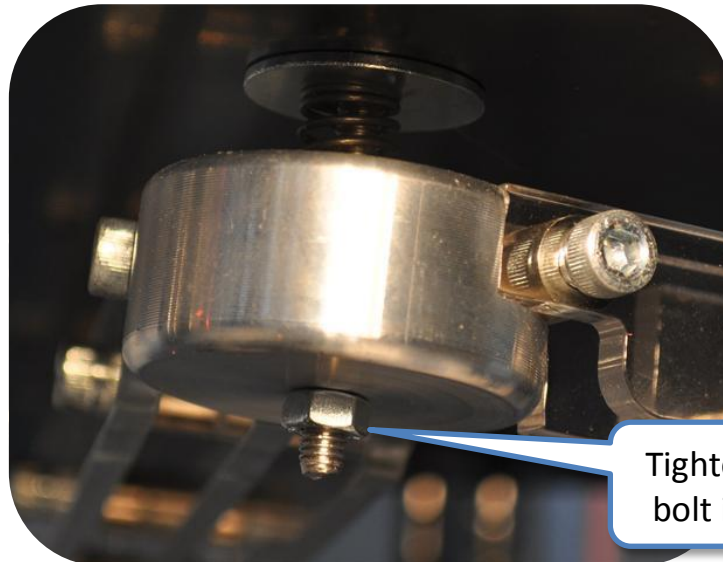

Tighten nut to lock bolt into position.




6.8 Check the bed is referenced to the extruder nozzles


After levelling the bed, the nozzles must be set to the correct height, to ensure that the first printed layer sticks properly (if the nozzle is too high the filament will not stick to the bed, if the nozzle is too low the bed may block the nozzle).

Use the 'Set Z Height' function to accurately adjust the height of the nozzle for the first layer.


- Check the bed is fitted correctly (page 14)
- Check the hot-end nozzles are clean (page 20).
- Check the bed is level (page 21).
- On the control panel select 'Settings', 'Set Z Height' function and press enter:

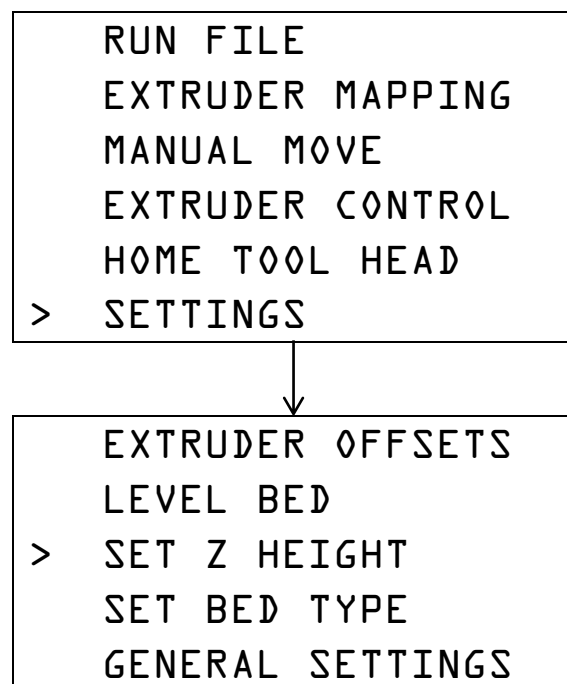

- Observe the gap between the nozzle and bed from the front of the machine. Press and hold the Z+/- buttons to move the bed.
- Start with a gap between the bed and the nozzle. Move the bed towards the nozzle. Observe the bed as it approaches the nozzle. Stop raising the bed as soon as the nozzle touches the surface of the bed. If the bed goes too far, simply move the bed back and repeat the approach.
- The bed should just touch the nozzle, without any compression in the bed springs:

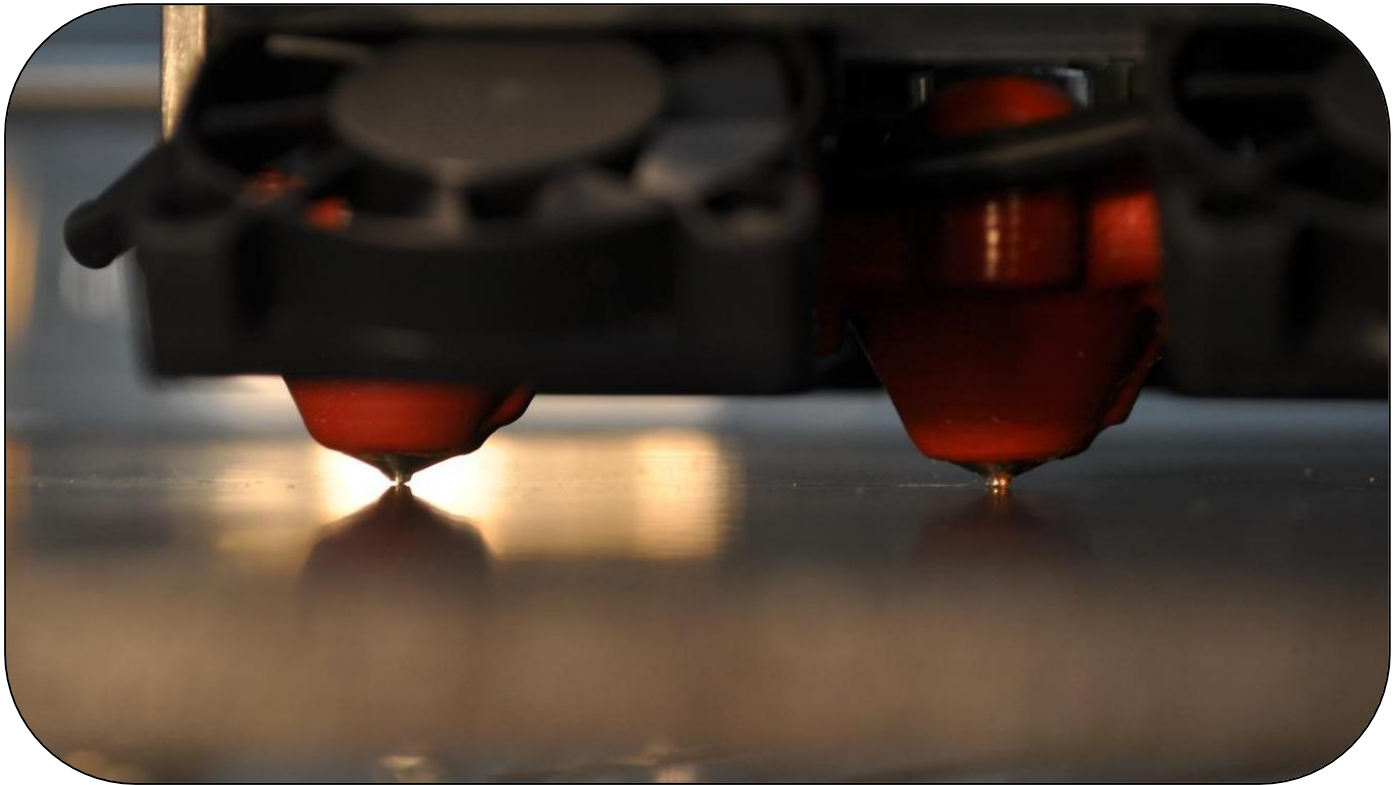

Caution: If the nozzle is pushed too hard against the bed, the nozzle will be forced into the bed for the whole first layer of printing. This will damage the nozzle and the bed. Ensure that setting the nozzle against the bed does **not compress the bed springs**.

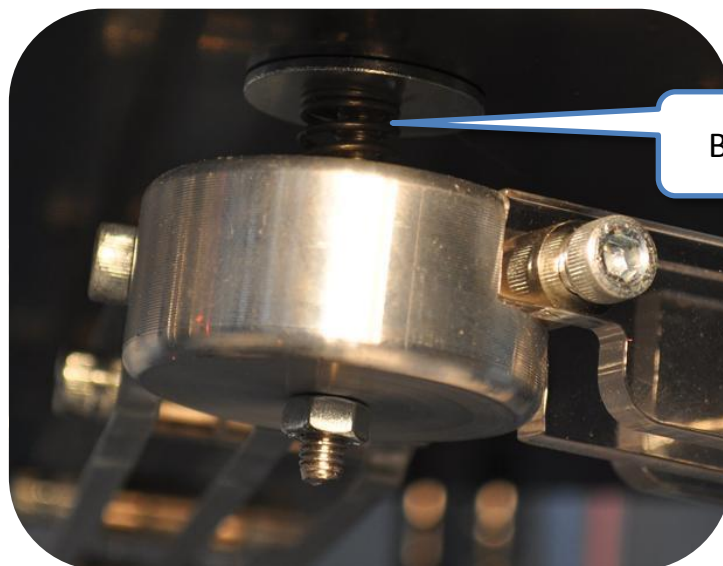

Bed spring







- Pressing Enter (X+) will save the setting to the printer's memory which is retained when the power is turned off. The Z offset value will be applied each time the printer is homed.
- Pressing Escape will exit the function without saving the value.

6.9 Load the extruders

6.9.1 Load the filament

Before loading a reel, the end of the filament must be prepared to prevent damage to the delivery tubes. This procedure is **essential** to prevent any damage to the delivery tubes, which may in turn block a nozzle.

- Cut the end of the filament at 45° from both sides to produce a point.
- Using sandpaper, remove all sharp edges. The tip should feel smooth.

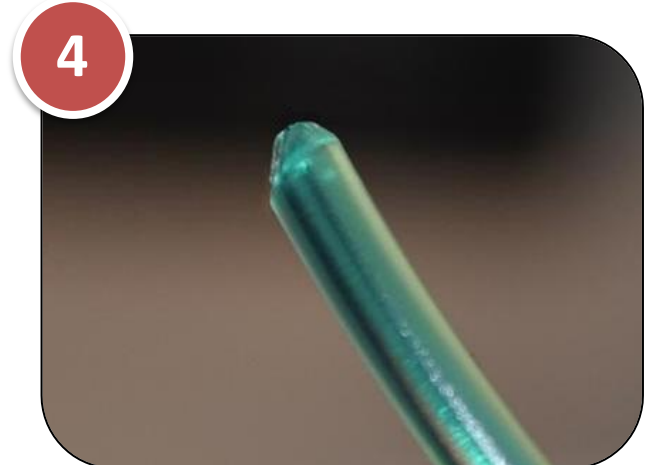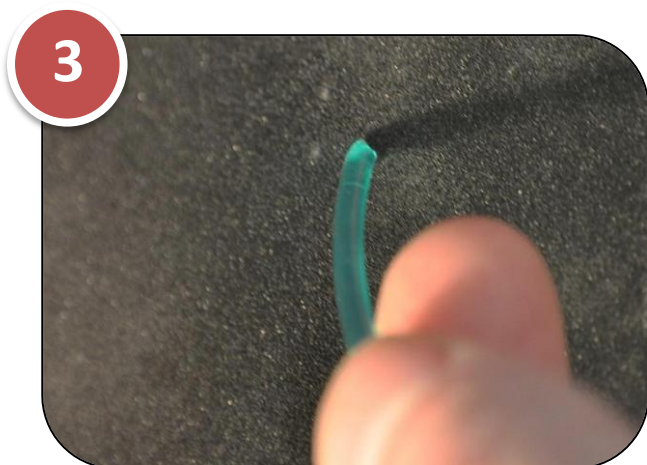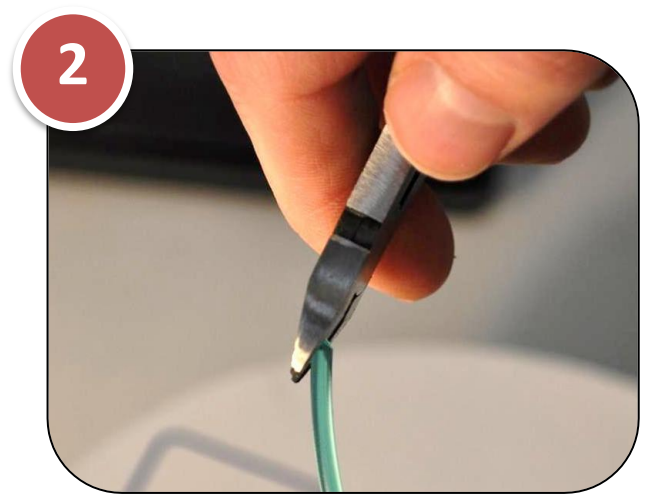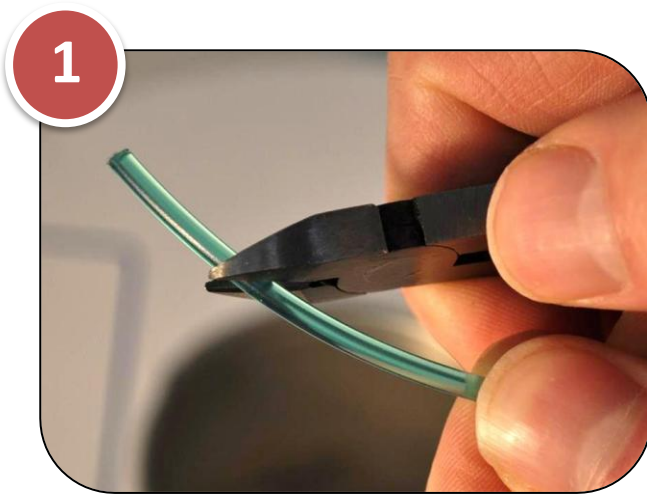

- Reel positions for each extruder are indicated below:
- Note: delivery tubes for each extruder run from **right to left**, as indicated below:

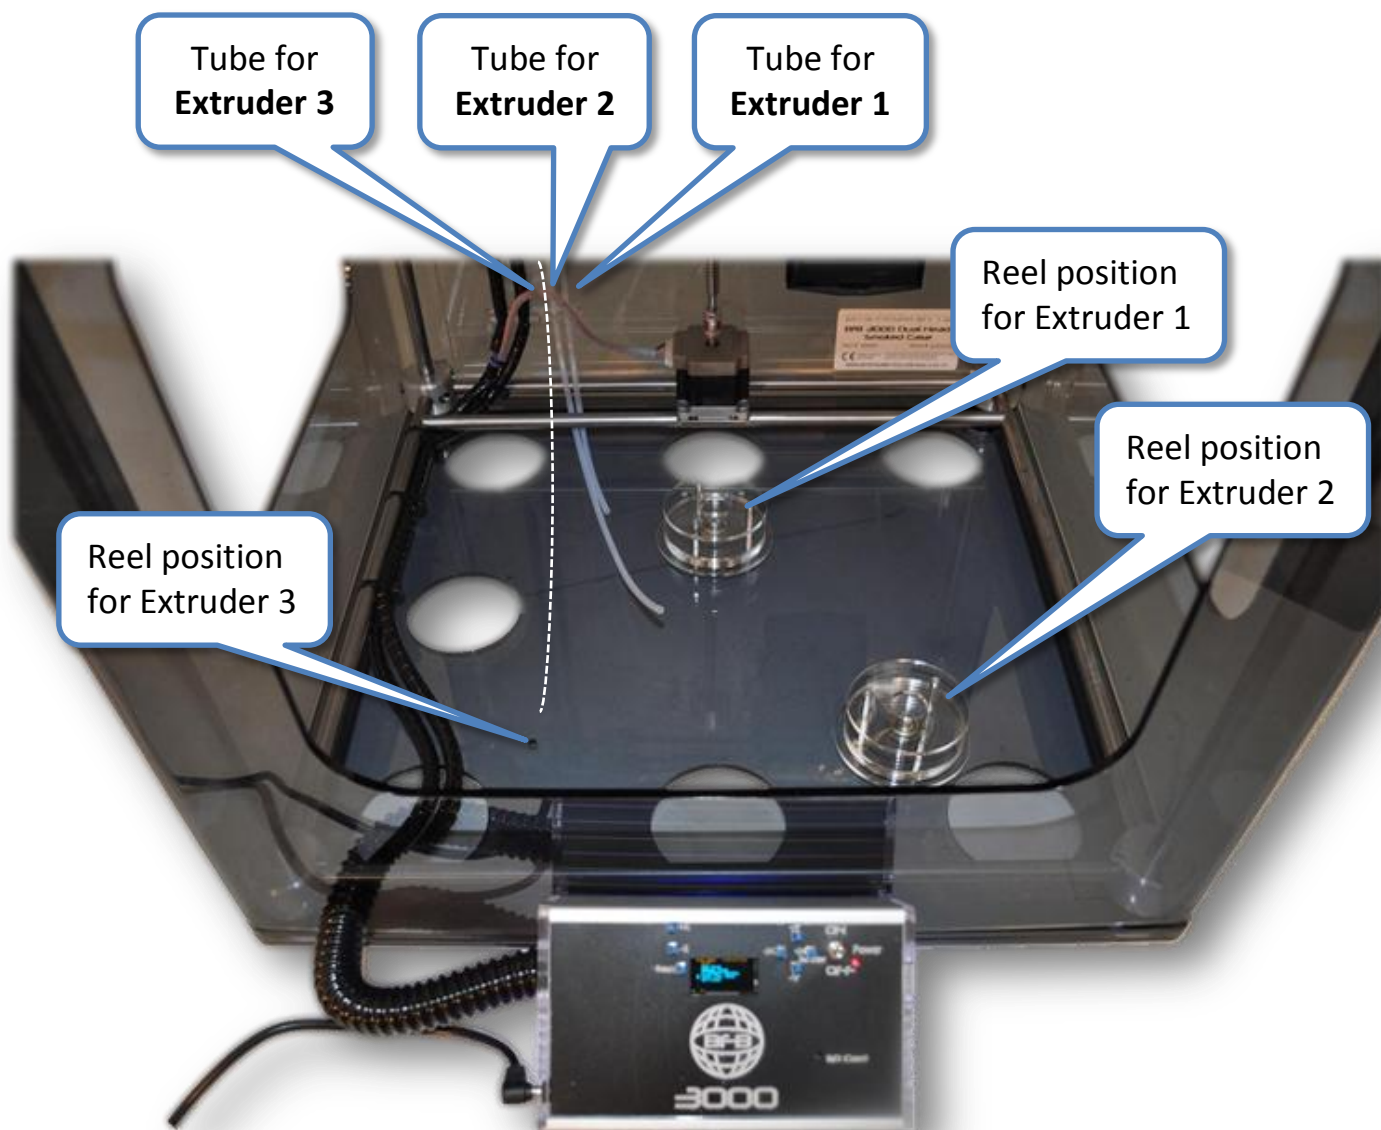



Figure 5: Reel positions and delivery tubes




- Load the type of materials into their reel positions according to the number of extruders in the BFB-3000:


Number of extruders in the BFB-3000	Material for Extruder 1	Material for Extruder 2	Material for Extruder 3
1	ABS or PLA		
2	ABS	PLA	
3	ABS	PLA	Not needed in first print

Example for this section: BFB-3000 with two extruders.

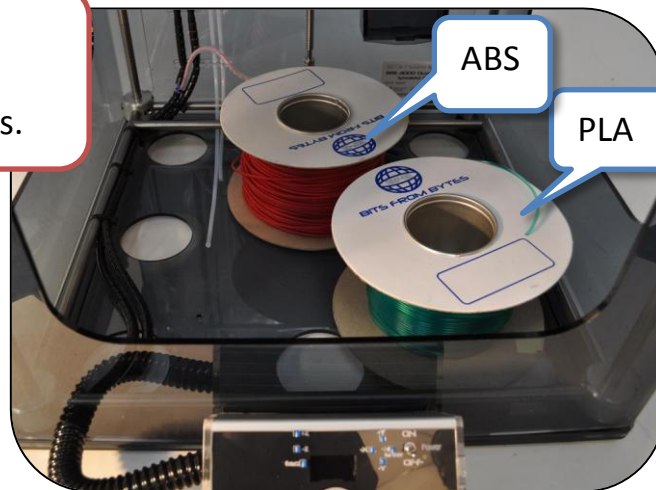


- After positioning the reels:

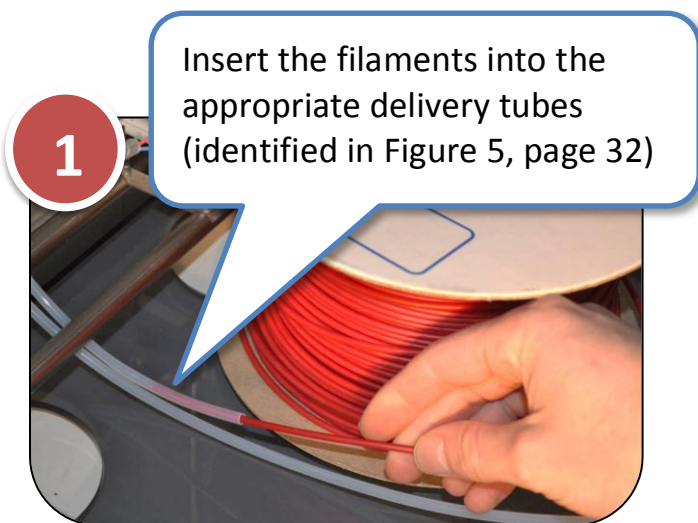

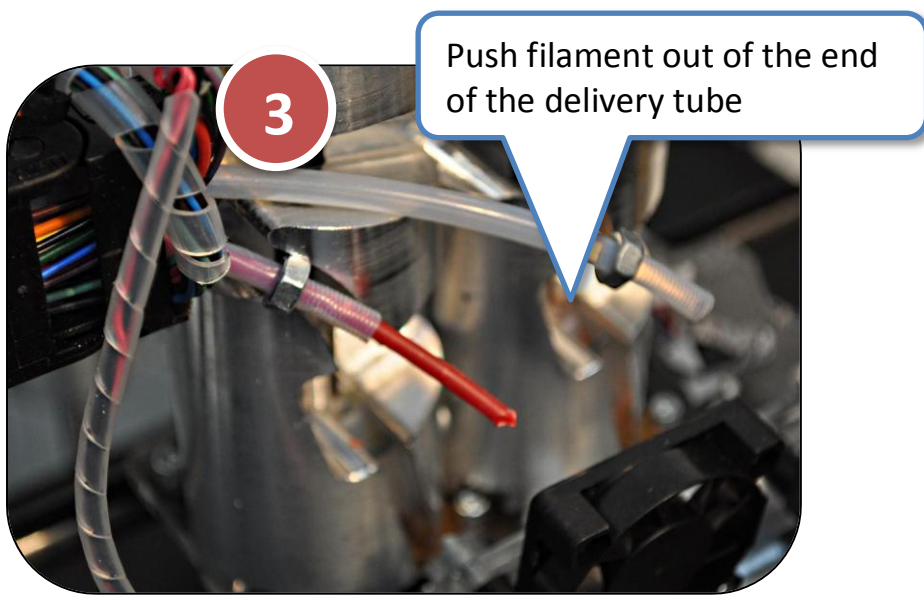


-
-
- Check the filaments exit the tubes at the correct extruders:

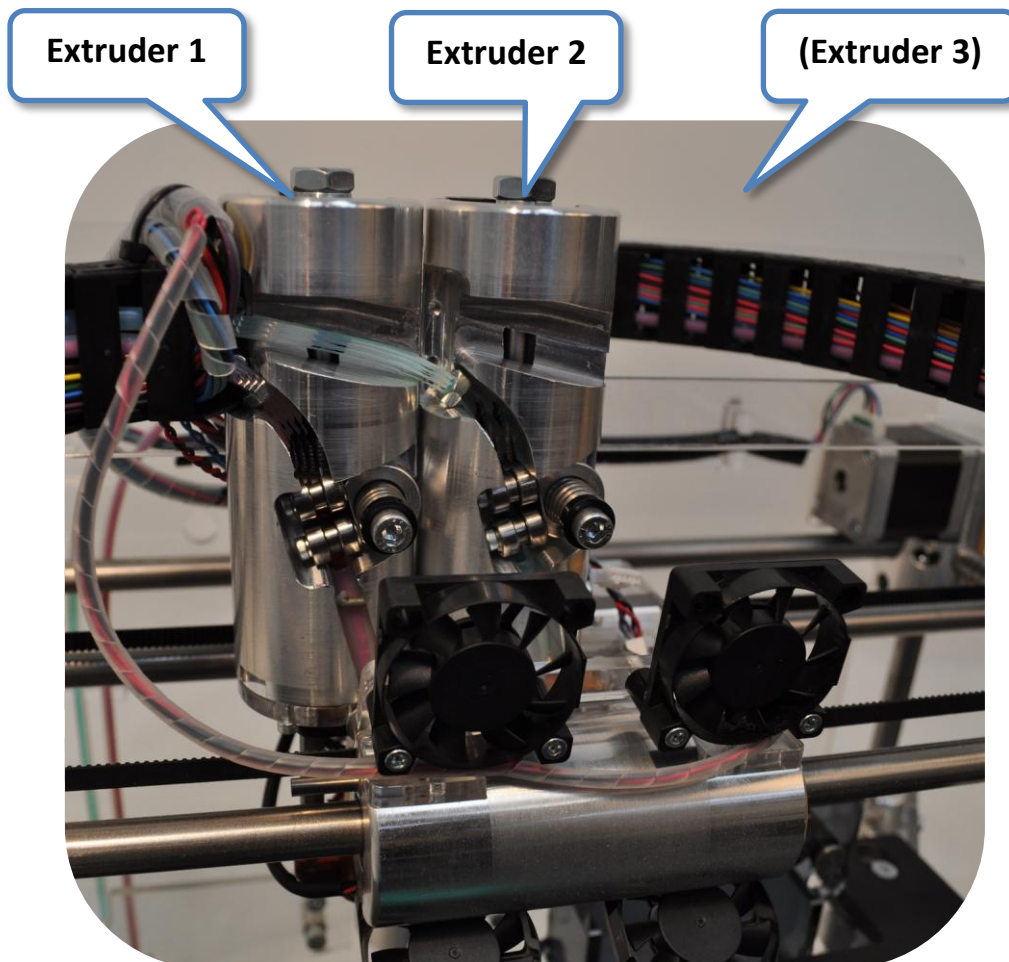


Remove the pressure bearings (below) on the extruders

4

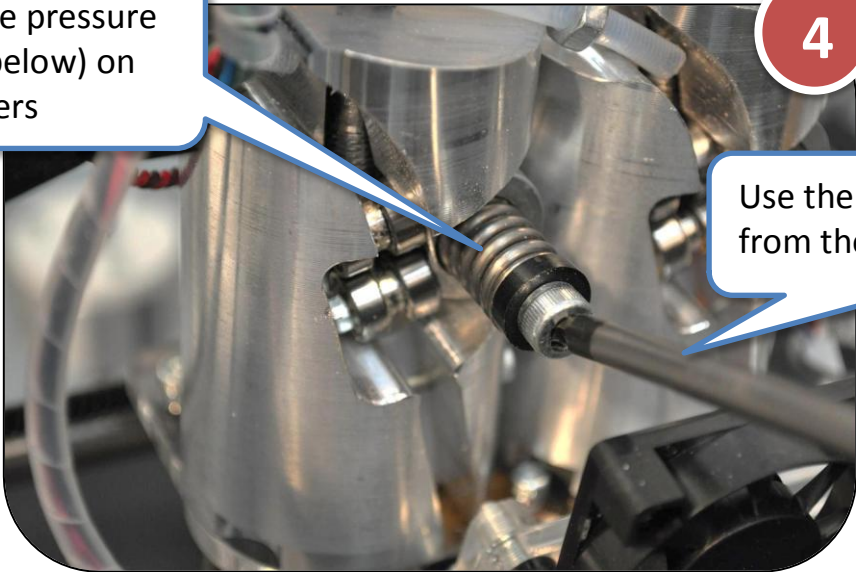


Use the 4mm hex driver from the toolkit

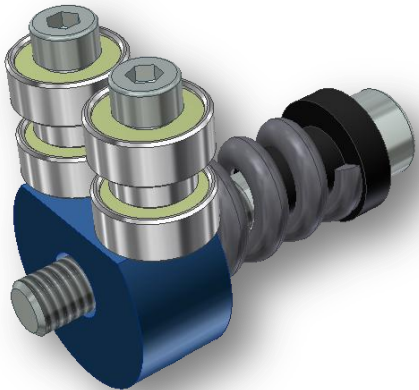

Pressure bearing assembly


5

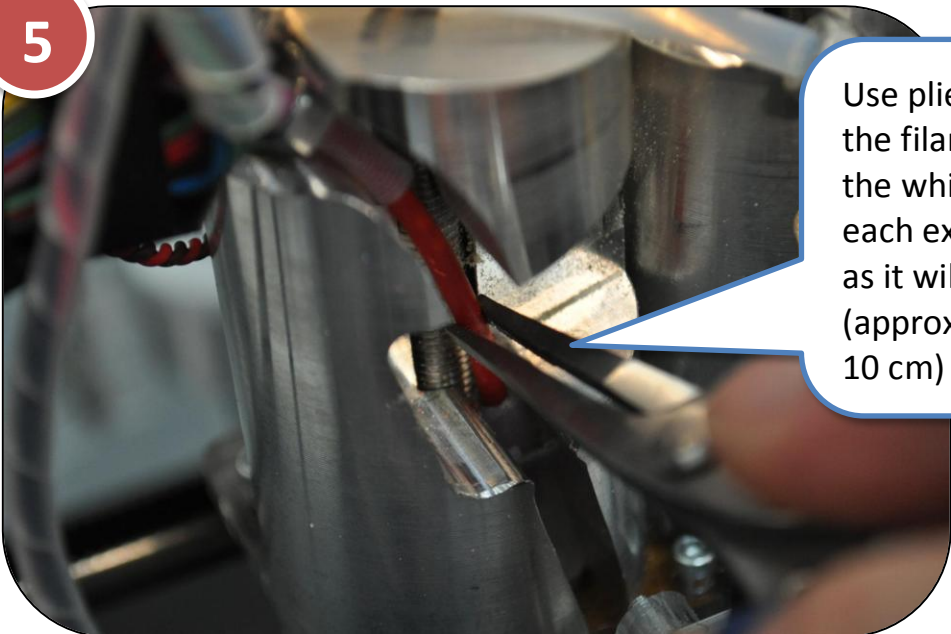


Use pliers to push the filaments into the white tube for each extruder, as far as it will go (approximately 10 cm)



Re-attach the pressure bearings onto the extruders.

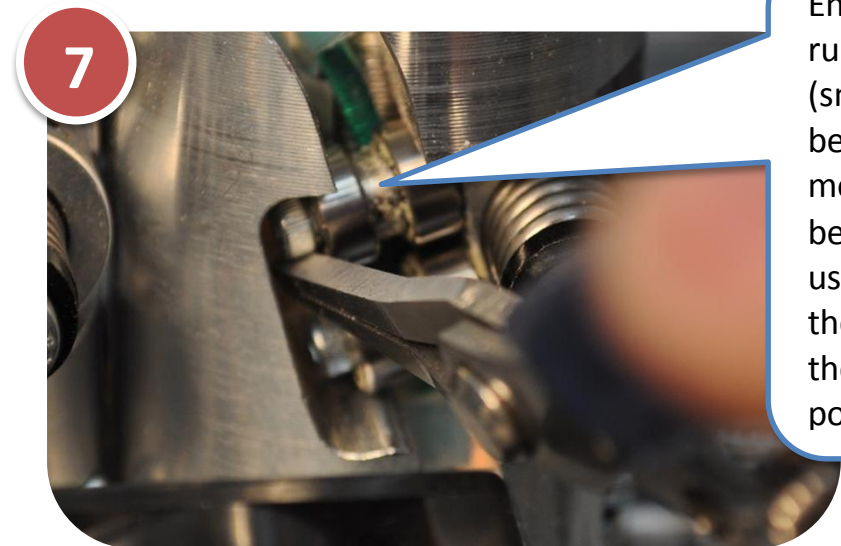

Ensure filaments run on the middle (smaller) pressure bearings. If not, move the bearings around using the nose of the pliers until they snap into position.

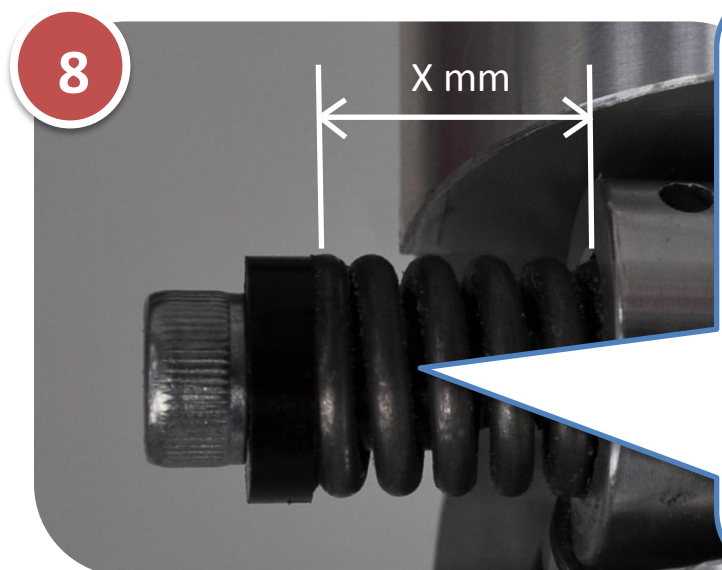

Tighten the pressure bearing springs until they start to compress. Compression (X mm) needs to be adjusted to suit your printer. Please refer to "Setting the extruder pressure bearings" (page 64).



6.9.2 Extruder control

- Make sure all extruders are loaded.
- Use 'Manual move' (page 18) to move the extruders to the centre of the machine, and lower the bed. This makes it easy to clean any purged material.
- On the control panel select the 'Extruder control' function and press enter:

```

RUN FILE
EXTRUDER MAPPING
MANUAL MOVE
> EXTRUDER CONTROL
HOME TOOL HEAD
SETTINGS
    
```

- 'Extruder control' manages one extruder at a time (E1, E2 or E3) using the buttons on the control panel.

E1, E2 or E3 are selected using the Z buttons

EXTRUDER CONTROL					
	Cur	Tgt	RPM		
E3					
E2	25C	0C	0		
> E1	259C	* 260C	0		

">" indicates selected extruder

Temperature at extruder nozzle (°C)

"*" indicates extruder is being heated.

Target temperature at extruder nozzle (°C). Use Y buttons to change.

Revolutions per minute for the extruder drive screw. Use X buttons to change.

Extruder motor will not turn until target temperature has been achieved.



Recommended maximum extrusion temperatures for materials:

Material	Extrusion temperature (°C)
ABS	260
PLA	195


Note: Extruders share power, therefore an extruder will heat up quicker if it is the only extruder with a high target temperature.

6.9.3 Purge the extruder


- Ensure filaments are loaded into the extruders, as defined in the section “Load the filament”, page 31.
- Make sure the springs on the extruder pressure bearings are compressed (as detailed in “Setting the extruder pressure bearings”, page 64) enough to push the filament into the teeth of the drive shaft.
- Proceed by purging one extruder at a time.
- Heat the extruder to the maximum temperature defined below, depending on the material in the extruder:

Material	Extrusion temperature (°C)
ABS	260
PLA	195

- Once target temperature has been achieved, turn the RPM up to 15.
- Examine the movement of the filament at the pressure bearing. It should slowly be driven towards the nozzle. If not, ensure that the spring pressure bearing is compressed sufficiently.

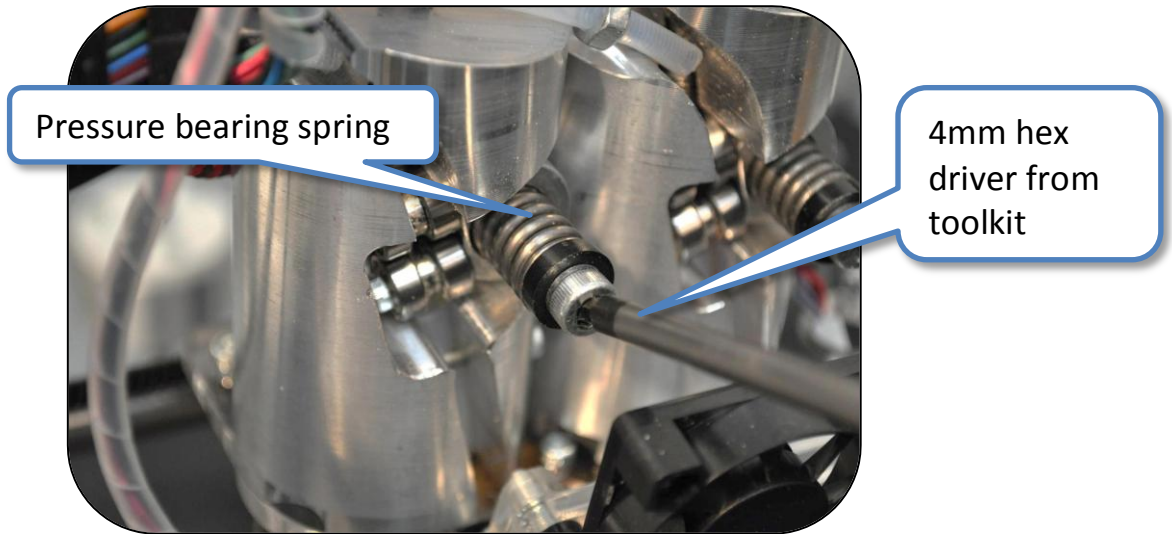

- Observe the end of the nozzle. A thin bead of molten plastic should come out of the nozzle. Depending on how far the filament was loaded into the extruder, this could take several minutes.

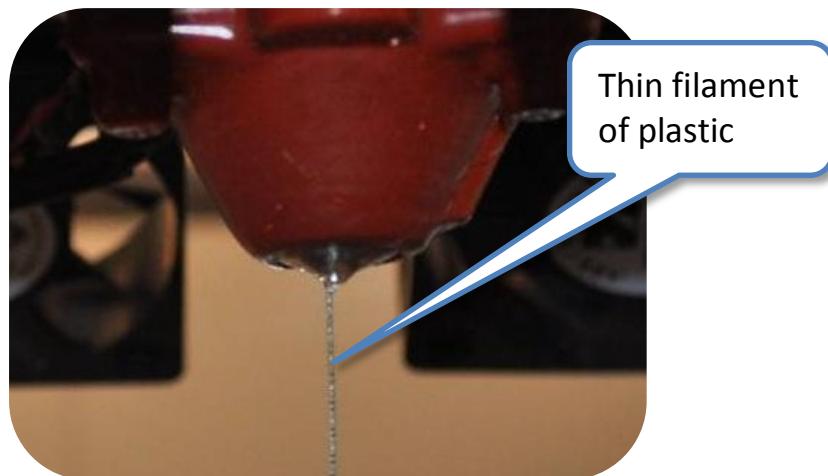

- Allow material to purge for a few seconds before reducing the RPM to 0.
- Repeat for each extruder.
- Turn the machine off to allow the nozzles to cool.
- As the extruders cool, clean the nozzles (see “Check the hot-end nozzles are clean”, page 20).
- Dispose of all waste filament from the nozzle.
-




6.10 Start a print

Make sure all items below have been checked. This is essential to guarantee that the print works.

- Check the bed is clear of any build material (page 13)
- Check the bed is fitted correctly (page 12)
- Check the hot-end nozzles are clean from plastic debris (page 20)
- Check the bed is level (page 21)
- Check the bed is referenced to the extruder nozzles (page 28)
- Load the extruders (page 31)

After the machine is setup correctly you will need to run two test files, documented in the following sections. When asked to print a file you will need to follow the procedure below:


- Insert the SD card into the BFB-3000 control box.
- Turn the control box on.
- Select “Run file”, and press Enter:

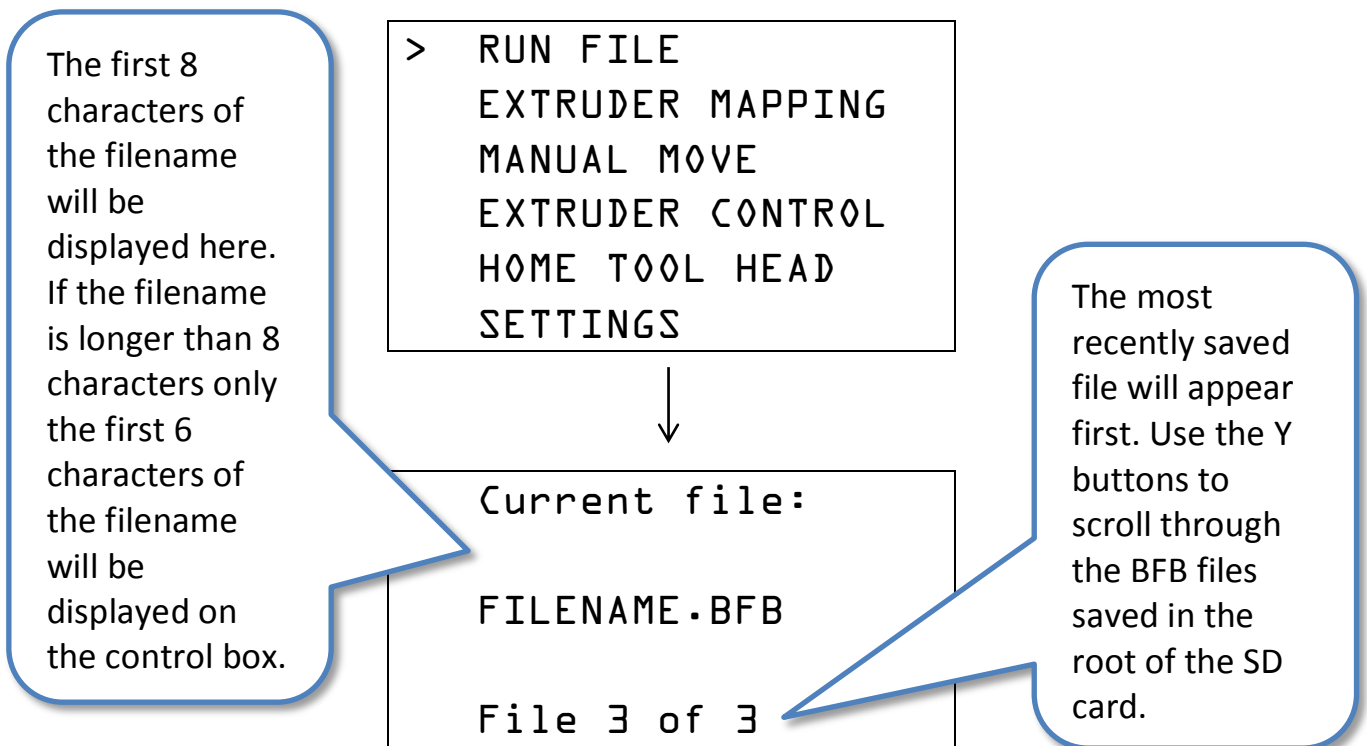

-
- Press Enter to confirm, and start the print.


6.11 Print a successful raft


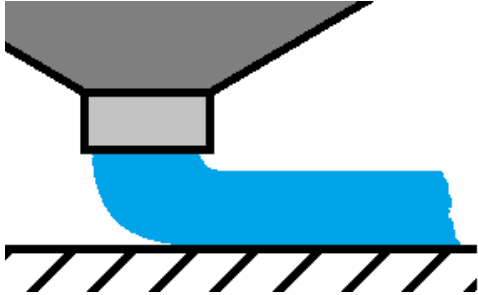
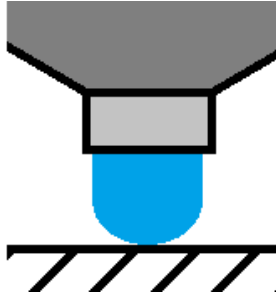

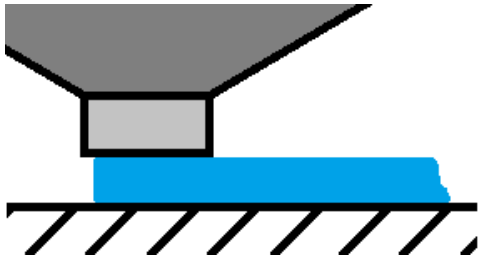
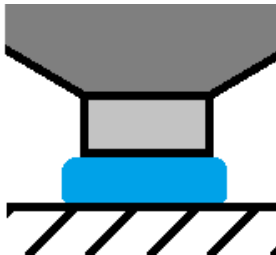

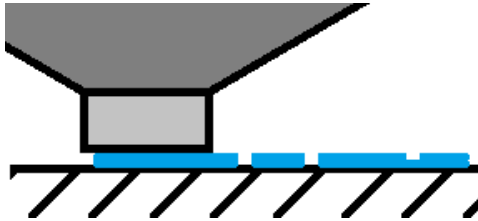
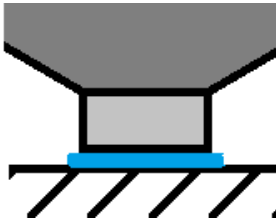
The raft supports the model during printing:

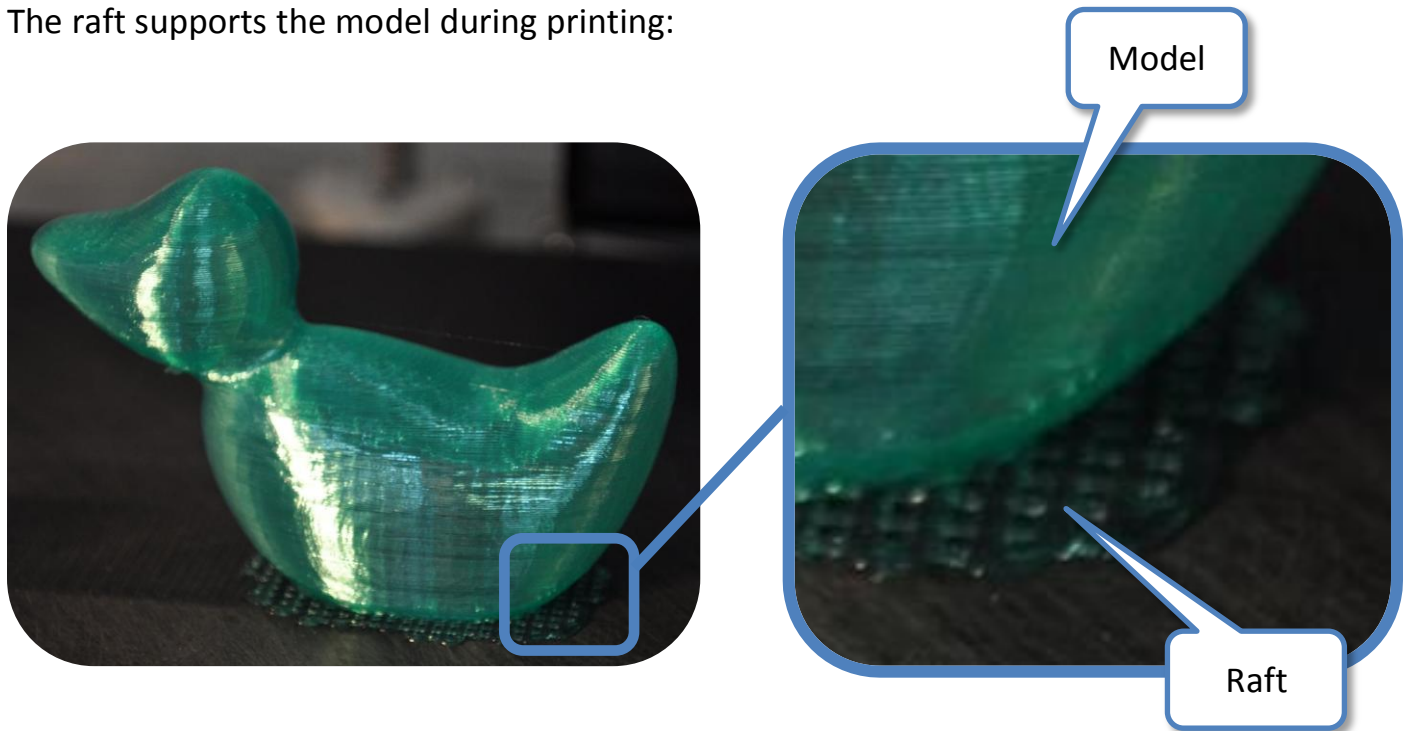

It is essential that a good raft is printed to guarantee a good build. Therefore the height of the hot-end nozzle over the bed for the first layer is critical:

- If the nozzle is too far away from the bed, the filament will not stick to the bed
- If the nozzle is too low it will not be able to extruder the filament, and there is a risk of damage to the bed and the nozzle.

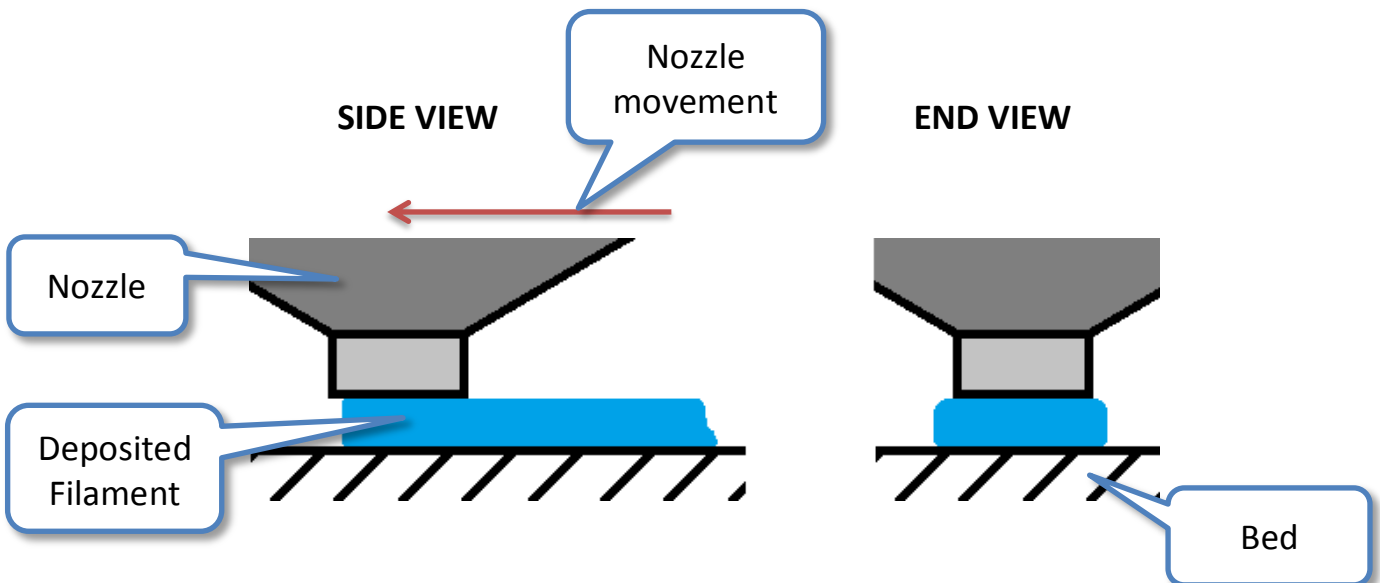

	SIDE VIEW	END VIEW	COMMENTS
			NOZZLE TOO HIGH: Not enough pressure on the filament into the bed, therefore small contact area between filament and bed. Raft may detach in mid print.
			OK: Filament pushed into the bed slightly to maximise surface area contact with bed, but still maintain extrusion flow.
			NOZZLE TOO LOW: Not enough clearance for the filament to be extruded, damaging either the extruder or the bed.



6.11.1 Print the raft check file

To make sure your printer is correctly setup, you will need to print the raft check file. This file is already included on the SD card supplied in your toolkit.


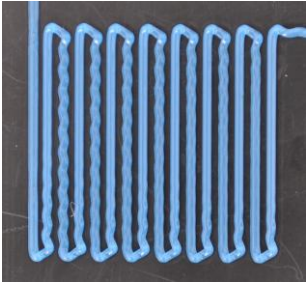
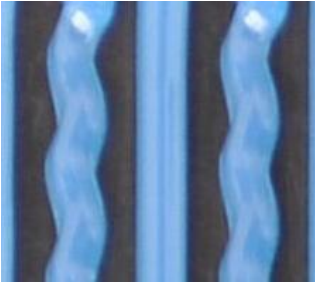
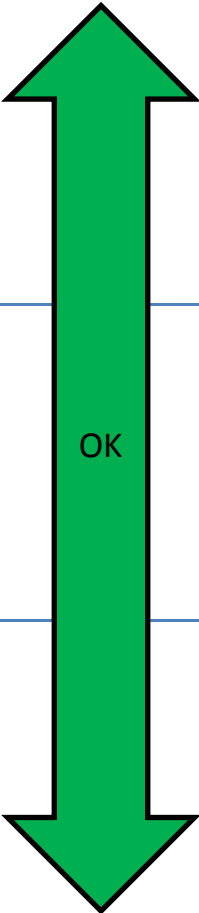
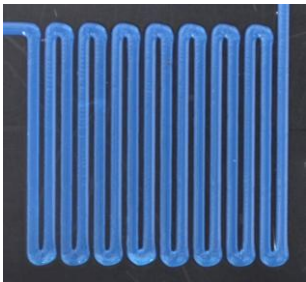

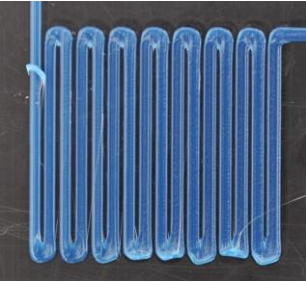
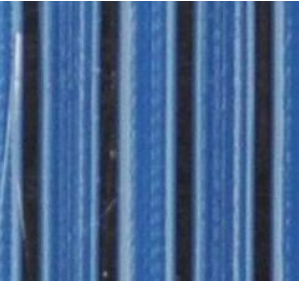





- Make sure materials are loaded as per “Load the filament” (page 31).
- Follow the section “Start a print” (page 40) to print the preloaded raft check file (on the SD card supplied in your toolkit) relevant to the material loaded into Extruder 1 (see table below). Remember, only the first 6 characters of the filename will be displayed on the control box if the filename is longer than 8 characters.

Material type in Extruder 1	File to print
ABS	RaftABS_CheckFile
PLA	RaftPLA_CheckFile

- Examine each raft pad in the check file, as guided in the following section.
- Remove the raft print when complete.



6.11.2 Examine the raft check file

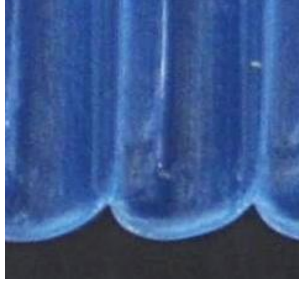
	RAFT	MAGNIFICATION	NOTES
			NOZZLE TOO HIGH: Wavy tracks, or tracks narrower than 1.2 mm (use vernier calipers to check). See “Perfect the raft” (page 46).
			
			
			
			NOZZLE TOO LOW: Tracks sides pushed <u>over</u> neighbouring tracks. See “Perfect the raft” (page 46).



6.11.3 Potential problems

- If the raft pad appears damaged, match the imperfection to the two scenarios below, and follow the corrective action suggested.
- Note that there may be some imperfections in the raft, but that the process is very forgiving and even the images shown below will generally not spoil a full print.

6.11.3.1 Track ripping

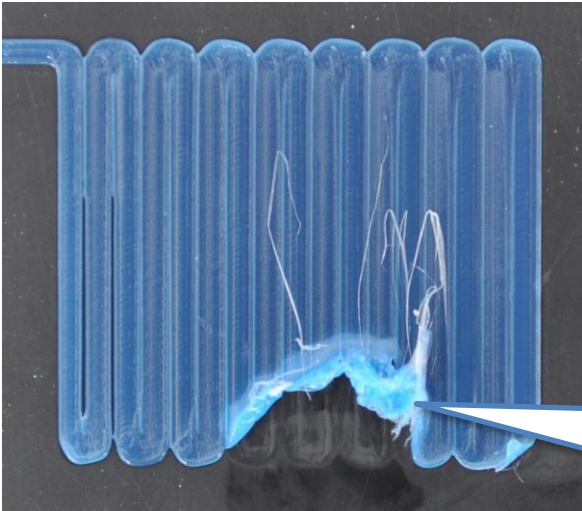

Track ripping: can be caused by a dirty nozzle snagging a track, and ripping it in the direction of the extruder. See “Perfect the raft” (page 46).

6.11.3.2 Purge deposit



Purge deposit: can be caused by a dirty nozzle leaving its plastic behind on the print. See “Perfect the raft” (page 46).



6.11.4 Perfect the raft

If analysis of the raft check file yields any problems, you will need to re-examine some of the setup stages:

ERROR	CORRECTIVE ACTION
Nozzle too high	See “Check the bed is referenced to the extruder nozzles” (page 28) to adjust the height at which the nozzle starts printing.
Nozzle too low	See “Check the bed is referenced to the extruder nozzles” (page 28) to adjust the height at which the nozzle starts printing.
Nozzle heights appear inconsistent across a single print	Check the bed is level (page 21).
Track ripping	Check the hot-end nozzles are clean (page 20).
Purge deposit	Check the hot-end nozzles are clean (page 20).



7 Print the first model


7.1 Test print

To get your BFB-3000 printer up and running as quickly as possible, we have already loaded a .BFB file of a duck for you to immediately make.

- Make sure materials are loaded as per “Load the filament” (page 31).
- Follow “Start a print” (page 40) to print the Duck file using the file on the SD card relevant to the number of extruders on your BFB-3000 (see table below). Remember, only the first 6 characters of the filename will be displayed on the control box if the filename is longer than 8 characters.

Number of extruders	File name
1 (ABS)	Duck1A_E1_ABS.bfb
1 (PLA)	Duck1P_E1_PLA.bfb
2	Duck2_E1_ABSraft_E2_PLAbuild.bfb
3	Duck2_E1_ABSraft_E2_PLAbuild.bfb (same as above)


- After printing, follow procedure detailed in “Remove existing prints” (page 12) to take the model out of the printer.
- Turn the machine off.
- Carry out essential post-print operations (detailed in the next section).
- Remove the raft from the model with sandpaper.

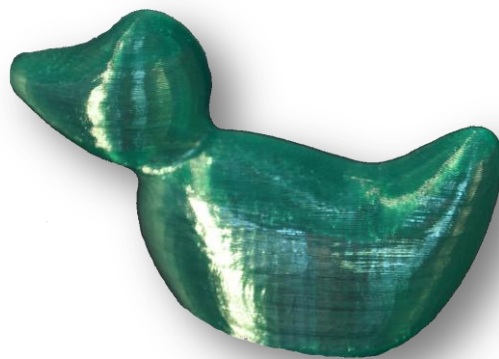

7.2 Essential post-print operations

7.2.1 Bed flatness

- New beds will distort slightly due to heating from the extruder. Check bed flatness with a straight edge (e.g. ruler) after each print:

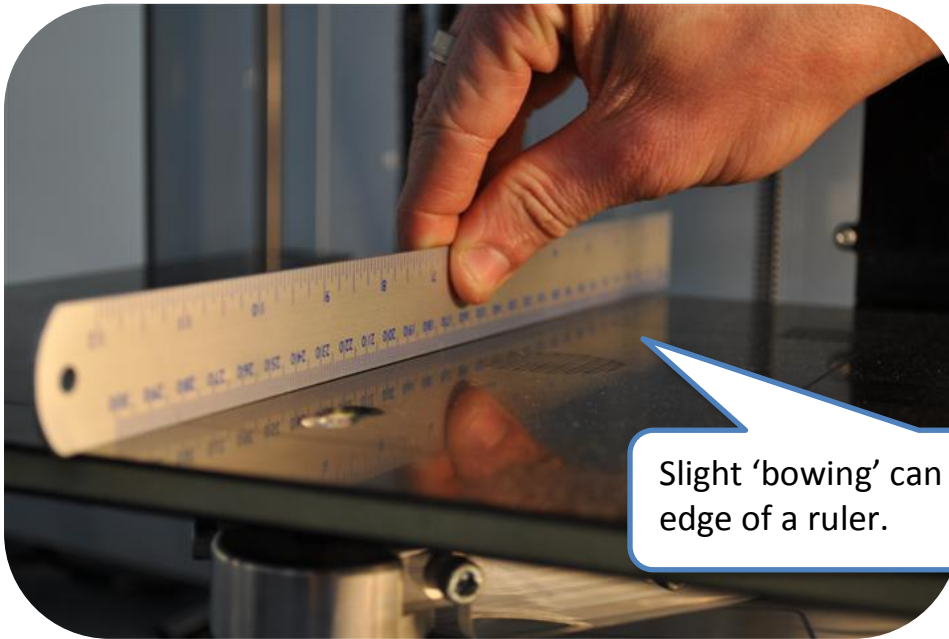

-
-
- If the bed is bowed downwards (even slightly), turn the bed over (page 15 and 16) to point the bow of the bed upwards for the next print, as shown below. The next print will restore the bed's flatness, maintaining a flat bed.



Printing with bed bowed up



Printing with bed bowed down



Bed


-
- If the bed is turned over:
- Check the bed is fitted correctly (page 14)
- Check the bed is level (page 21)
- Check the bed is referenced to the extruder nozzles (page 28)



7.2.2 Empty material waste bin

After each print you will need to empty the nozzle wipe box

- Lower the bed (see “Manual move”, page 18) to access the nozzle wipe box.

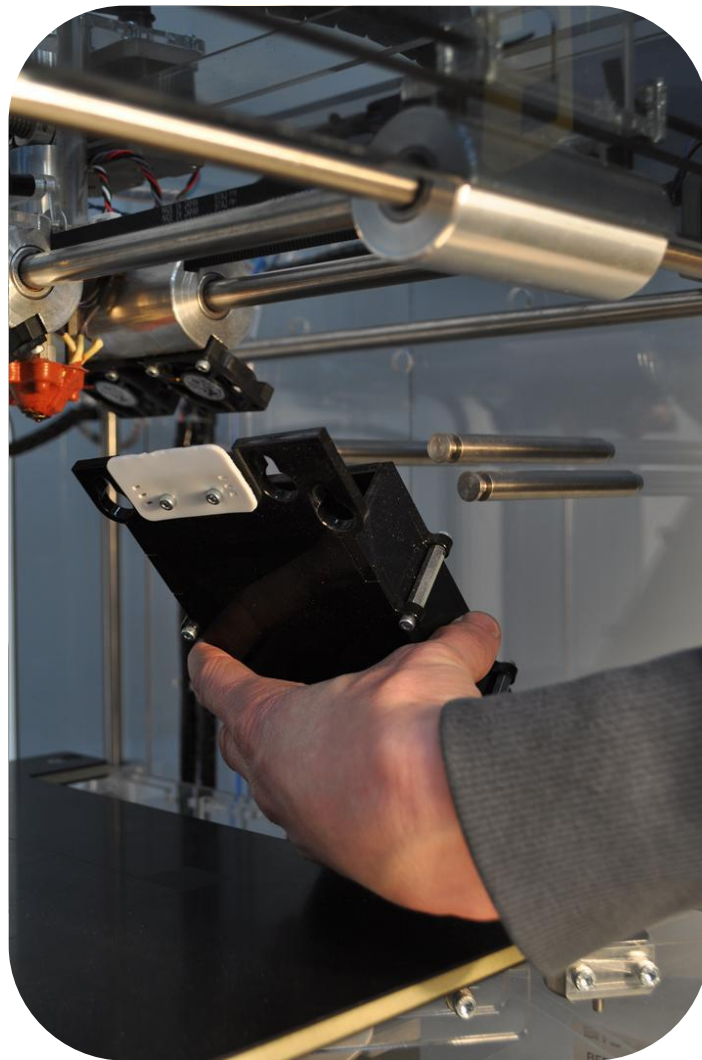

- Remove the waste box from the machine and dispose of the plastic deposits.
- Re-install the waste box back into the machine, ready for your next print.



8 Further printing

Now your printer is set up, you will need to visit our website at **www.bitsfrombytes.com** to:

- Download and install Axon software (illustrated in page 9).
- Check for free updates - we issue updates regularly to continually improve printing performance.



9 Further operations

9.1 SD card notes

- All .BFB files (exported from Axon) must be saved to the root of the SD card. Any files in folders on SD card will not be displayed on the BFB-3000.
- The SD card must be no larger than 2 Gb.

9.2 Reloading the extruders

See “Load the extruders” (page 31) for all references:

- Remove pressure bearing.
- Heat up the nozzle to extrusion temperature (see Extruder control, page 37).
- Pull remaining filament out of extruder using pliers.
-



-
- After removing the remaining filament, follow the instructions in the “Load the extruders” section (page 31) to load a new filament.
- Purge the extruder (page 38) until the old material is completely flushed out. See caution note below about purge temperature:



If a new material is being loaded in to the extruder, purge at the temperature of the material which has the highest melting point. E.g. if PLA is being loaded into an extruder which previously had ABS, purge at 260 °C. This ensures that the old, higher melting point, material will melt and fully flush out. Failure to do this will result in a blocked nozzle, as the higher melting point material will remain frozen in the nozzle.



9.3 Notes on materials

9.3.1 Properties

Material	Properties
ABS	<p>High toughness. Non-degradable.</p> <p>Do not print area larger than 100 mm square – ABS has relatively high shrinkage on cooling, and some geometries for larger prints are prone to warping.</p>
PLA	<p>Similar strength to ABS. Biodegradable above 60 °C.</p>

9.3.2 Soluble support structure

For overhanging model features, Axon automatically generates support material. To make this support material easy to remove from the finished model it is possible to use different materials for the build and the support. This is configured in Axon.

By using ABS build and PLA support, PLA support can be dissolved by:

- Leaving the model in an ultra-sonic tank with a small amount of caustic soda. Time and concentration depends on the volume of the material needed to dissolve.
- Leave the model in water at 80 °C for over 48 hours.

9.3.3 Storage

All polymers degrade with time. The following conditions ensure the filament remains high quality:

- Do not unpack until filament is needed.
- Store in a cool place: 2 °C - 15 °C.
- Keep away from UV light (e.g. sunlight).
- If machine is to left unused for an extended period of time, repack filament with silica-gel sachet to maintain dryness (if present).
- Use within 12 months of receipt.



9.4 Control panel functions

After turning the BFB-3000 on, the control panel presents the main menu (below).

```
> RUN FILE
  EXTRUDER MAPPING
  MANUAL MOVE
  EXTRUDER CONTROL
  HOME TOOL HEAD
  SETTINGS
```

- Use the Z buttons to scroll up and down the menu.
- Press X+ to enter a function.
- Press Escape to return to the main menu.

The following sections describe all the functions.

9.4.1 Run file

- See “Start a print” (page 40).

9.4.2 Extruder mapping

Extruder mapping allows you to swap the extruders specified in your BFB files (generated in Axon) onto physical extruders on the machine. E.g. you can map the extruder specified in the BFB file as extruder 1 onto physical extruder 2.

Swapping extruders is useful if you want to avoid loading and unloading materials to match the material in the physical extruders to those specified in the BFB file.

	Gcode		Physical
	E3	--	E3
	E2	--	E2
>	E1	--	E1



- Use the Y buttons to change the mapping.
- Press X+ to save, or Escape to quit without saving.

Axon builds the BFB file using Gcodes. The file is readable with any text viewing program.

Some basic Gcode knowledge is required in order to identify which extruder is used for a particular purpose i.e. raft, model or support material. It is also a requirement to identify which material the Gcode extruders are running by observing the temperatures in use. E.g. if the Gcode file contains M104 S260 and M204 S195, this indicates the Gcode file expects extruder 1 to contain ABS and extruder 2 to contain PLA. If your physical printer is indeed loaded like this, you cannot simply remap (swap) the extruders due to the material difference. This would cause the printer incorrectly operate extruder 1 at 195C when it is physically loaded with ABS (requiring 230 - 260C).

What follows is the simplest usage scenario. Your machine is loaded with different coloured PLA in extruders 1 and 2. You have a Gcode file that only uses extruder 1 PLA. You can remap Gcode extruder 1 onto physical extruder 2. This will result in the print solely using physical extruder 2. (Physical extruder 1 will be unused.)

Remapping extruders is achieved by going to Settings -> Extruder Mapping. Identify what each extruder is used for in the Gcode, determine which physical extruder you want them to map to. Pressing X+/- will change Gcode extruder 1 mapping. Pressing Y+/- moves the menu cursor between Gcode extruder 1&2. It is not possible to select Gcode extruder 3 as this is automatically set to the remaining physical extruder.

There are a few things to note:

- When extruder remapping is enabled, the user is prompted about this prior to selecting a print file because the remapping can result in unexpected behaviour if the user is unaware of the active remapping function.
- The remapping configuration settings are not stored persistently as this is deemed undesirable. When the printer power is turned on the remapping reverts to 1:1 direct mapping. (The aforementioned pre-print remapping prompt is not shown when the mapping is 1:1)
- Please ensure the Gcode file allows enough room between the left of the print and the printer framework. I.e. attempting to print the test raft Gcode file with a double extruder RapMan will cause the extruder carriage to hit the framework when it attempts to position physical extruder 2 into the far left corners of the print bed as the raft Gcode file instructs.



9.4.3 Manual move

- See “Manual move”, page 18.

9.4.4 Extruder control

- See “Extruder control”, page 37.

9.4.5 Home tool head

- Push ‘Enter’ to move all axes to their home position.



Make sure the bed is in position before homing the tool head. The bed contains a sensor necessary for homing. Without the sensor, the machine will drive the bed frame into the waste disposal stand-offs. Repeated collisions will damage the machine.

9.4.6 Settings

- Push ‘Enter’ to enter the “Settings” menu:

```
> EXTRUDER OFFSETS  
  LEVEL BED  
  SET Z HEIGHT  
  SET BED TYPE  
  GENERAL SETTINGS
```

See the following sections for descriptions on each setting.



9.4.6.1 Extruder offsets

Extruder offsets defines the position of extruders 2 and 3 in the BFB-3000, relative to extruder 1. Settings here should only be changed after performing a nozzle calibration print. Visit our website to download the calibration procedure and determine the offsets values.

```
> Extruder 2 X -44.30
   Extruder 2 Y  0.00
   Extruder 3 X -88.60
   Extruder 3 Y  0.00
```

- Use the Z buttons to select the extruders. Use the Y buttons to alter the values.
- Press X+ to save, or Escape to quit without saving.



Incorrect values will severely affect print quality.

9.4.6.2 Level bed

See “Check the bed is level”, page 21.

9.4.7 Set Z height

See “Check the bed is referenced to the extruder nozzles”, page 28.

9.4.7.1 Set bed type

The bed design in the machine dictates how the machine operates.

```
> V2 Black composite
   V1 Clear perspex
```

- Use the Z buttons to select the bed type.



- Press X+ to save, or Escape to quit without saving.



If the wrong bed is selected, the machine will be unable to home its z-axis and will damage itself.



9.4.7.2 General settings

General settings are designed for advanced use.

>	Ignore G92	Yes
	Enable Hopping	Yes

- Use the Z buttons to select the option.
- Press X+ to save, or Escape to quit without saving.



Incorrect general settings will severely affect the BFB-3000 print quality. Do not change any general settings without fully understanding each setting first.

See the following sections for general setting explanations.



9.4.7.2.1 Ignore G92

The “ignore G92” setting is required because of the previous method of managing extruder offsets which involves using the Gcode G92 command. The user was required to determine the extruder 2 offset value through printing the calibration print. The calculated offset value was then entered into Axon. During Gcode generation, Axon inserts a G92 offset command to offset the carriage by the user calculated offset amount.

Therefore all Axon generated Gcode files that utilise two extruders contain G92 commands to apply the extruder 2 offsets. A drawback of this approach is that the Gcode file is printer dependent because the Gcode file contains the unique extruder offsets for the printer that was calibrated.

In order to make the Gcode files portable between printers, the extruder offsets are entered directly into the printer memory with firmware V4.1.0 onwards. This achieves moving the extruder offsets from the Gcode file and into the printer. When the printer utilises extruder 2, it reads the offsets from memory.

When the extruder offsets are loaded from memory, the Axon generated G92 commands in the Gcode file must be ignored by the printer. Otherwise the Axon generated G92 extruder offsets will be applied in addition to the printer memory extruder offsets, resulting in print failure.

Typically the desired functionality will be to ignore the Axon generated G92 offsets so the printer memory extruder offsets are applied solely. However an advanced user may want to use G92 to produce an offset for a number of reasons, in which case the “ignore G92” option is provided.

9.4.7.2.2 Hopping

By default this setting is enabled on the BfB 3000 and disabled on the RapMan. The setting is accessed via Settings Menu -> General Settings. Hop causes the bed to lower 1mm during a non-extruding move, and raise 1mm when the destination position has been reached. This reduces the chance of the extruder hot end hitting part of the model and causing an XY shift. It also reduces the chance of the extruder hot end knocking over a small delicate pillar shape for example.

9.5 Maintenance operations

9.5.1 Updating your printer



Visit our website at www.bitsfrombytes.com to check for free upgrades. This may include:

- Firmware (the software inside the control box)
- Hardware (mechanical improvements)

9.5.2 Adjusting the nozzle wipe


The nozzle wipe should sit slightly higher than the height of the nozzle tip, so that when the nozzle is moved over the wipe, the wipe brushes over the nozzle tip.

- Use 'Manual move' (page 55) to position the nozzle over the nozzle wipe box.

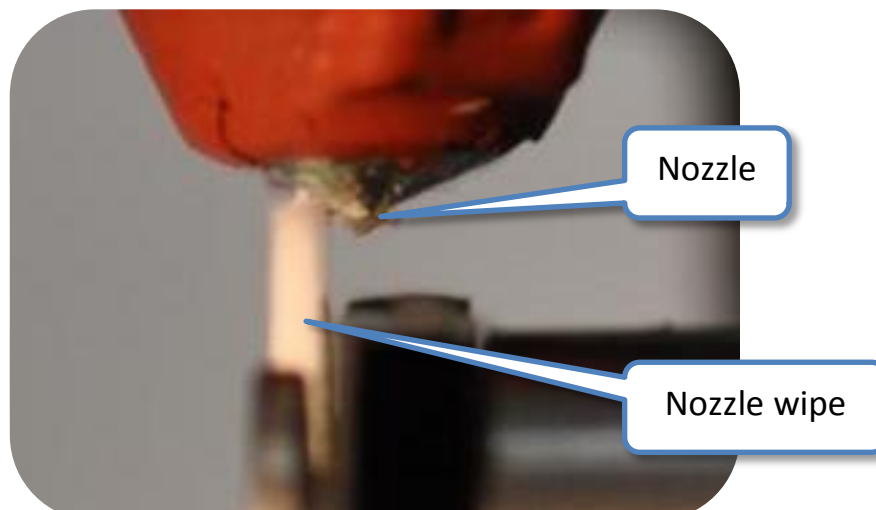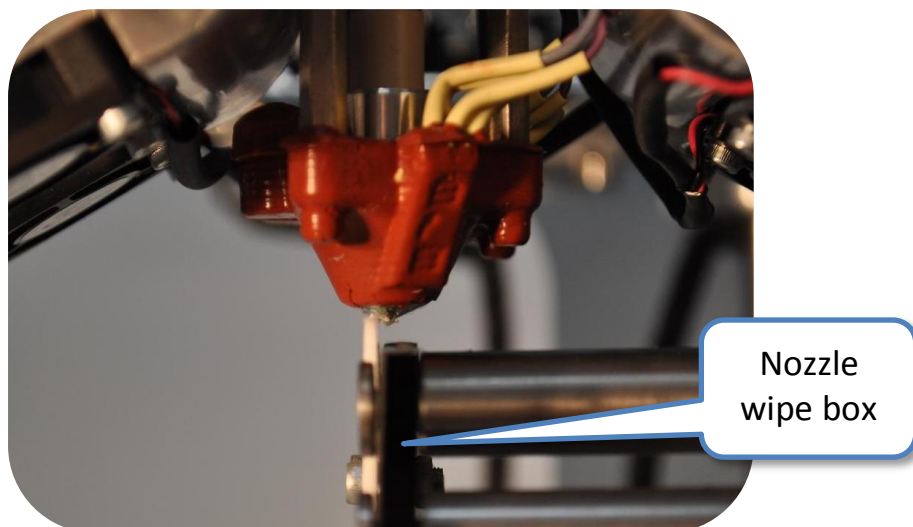



- To adjust the height of the nozzle wiper, remove the nozzle wiper box and loosen the M3 nuts and bolts on the back of the wiper using the 2.5mm hex driver supplied in the toolkit. Use the reference holes to gauge the adjustment, and ensure that the nozzle wiper is horizontal.

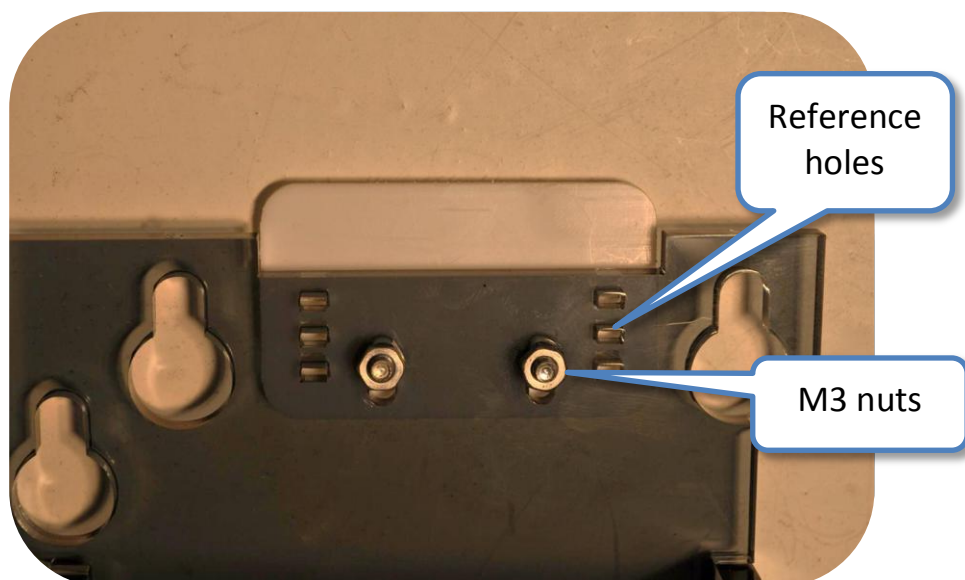

- Retighten the M3 nuts, replace the nozzle wiper box and re-check nozzle wiper position.



9.5.3 Fine adjustment to level the nozzles

Nozzles must be level for a reliable print. If one nozzle is lower than the other, it may damage the print.

To evaluate if the nozzles are level:

- Make sure the bed is flat (see “Bed flatness”, page 48)
- Check the bed is level (page 21)
- Check the hot-end nozzles are clean from plastic debris (page 20). It is common to mistake dirty nozzles as not being level – especially if the polymer in the extruder is transparent.
- Using “Manual move” (page 18) drive the bed up to the nozzles.
- If the nozzles are not level with respect to the **flat** and **level bed**, proceed as follows:



The remainder of this procedure will level the nozzles by sanding the tips down. This is a permanent change - ensure that it is necessary by thoroughly checking all the preceding steps before continuing, as the process cannot be reversed.

- Make sure that the nozzle has plastic loaded into the tip. This reduces the burring on the inside surface of the orifice.
- Wind the flat bed up to the nozzles.




Ensure that the bed is completely flat, otherwise the nozzles will be permanently set non-level.

- Position a sheet of sandpaper in between the bed and the nozzle, with the grit pointing up at the nozzle.
- Move the sandpaper back and forth, flat against the bed, slowly moving the bed up to grind away the lower nozzle tip.



The \varnothing 0.5 mm nozzle orifice only has 1.0 mm thickness. Remove as little material as possible to achieve level nozzles. Do not remove more than 1.0 mm, otherwise the orifice will begin to widen, and the nozzle will be permanently damaged.

- When all nozzles are level, stop sanding.
- Manually turn the \varnothing 0.5 mm drill bit (supplied in the toolkit) 2 revolutions to remove any burrs in the orifice from the sanding process. You will need to use “Extruder control” (page 37) to melt the plastic inside the nozzle to insert the drill bit.

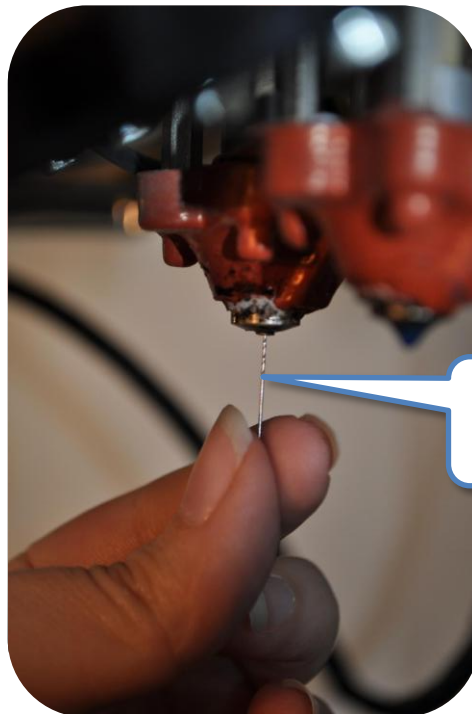

Caution: When heating up nozzles to melt plastic, **do not touch** the nozzle tips with your fingers. Extruders will burn if touched when hot.



Make sure the \varnothing 0.5 mm drill bit is turned straight, otherwise this may widen the orifice and damage print quality.

- Purge the extruder (page 38).



9.5.4 Setting the extruder pressure bearings

The pressure bearing pushes the filament into the extruder drive shaft. In turn, the drive shaft pushes the filament through the hot-end.

The pressure bearing setting is critical to the extrusion process during a print. It is essential to test this setting when first using the printer.




Over-tightening the pressure bearing will over-deform the filament and it will jam in the nozzle tube.




Under-tightening the pressure bearing will not engage the filament with the extruder drive shaft, therefore the filament will not be driven through the nozzle.

- Prepare the extruder for a purge as detailed in “Purge the extruder” (page 38).

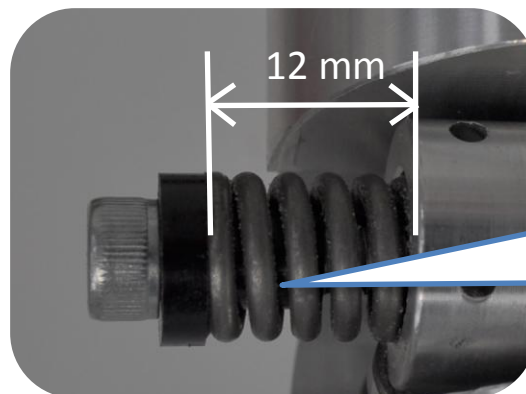


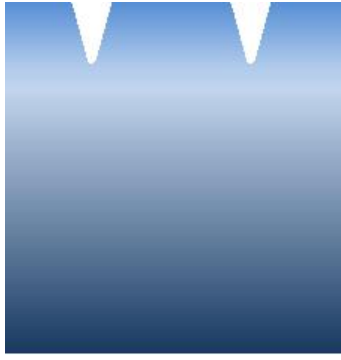

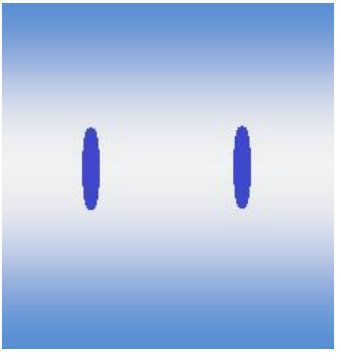
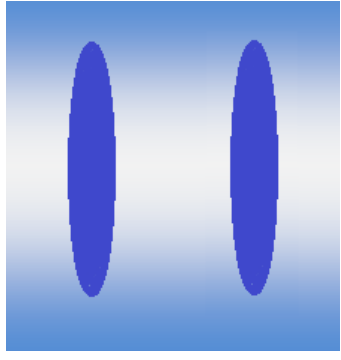
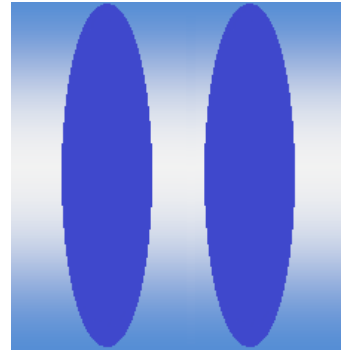
Tighten the pressure bearing springs until they are compressed to ~12 mm.

- Purge the extruder for 10 minutes.
- Now pull out the filament from the nozzle and examine the bite marks left on the filament from the extruder drive shaft. Compare this with the chart below.

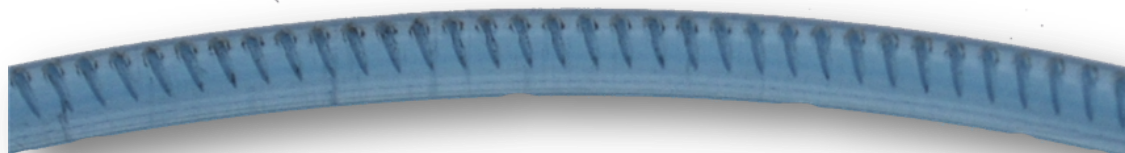

- Once the correct pressure bearing setting is established it should be used for each print (this procedure does not need to be repeated before each print).




Pressure bearing setting	TOO LOOSE	OK	TOO TIGHT
Bite mark	Small	Medium	Large
Side view of filament			
Top view of filament			
Potential problem	Filament may disengage from extruder drive shaft during print.	OK	Filament diameter may excessively deform during print and jam in the nozzle tube during a print.
Solution	Tighten pressure bearing	OK	Loosen pressure bearing




9.5.5 Handling a ground-out filament

If a pressure bearing is poorly assembled, or the nozzle suffers from a blockage (e.g. printing too close to the bed), the back of the filament may be ground out by the extruder drive shaft. The drive shaft will then be unable to push the filament down into the nozzle, preventing the extruder from extruding. This is normally indicated by a fast build-up of plastic dust around the pressure bearing.

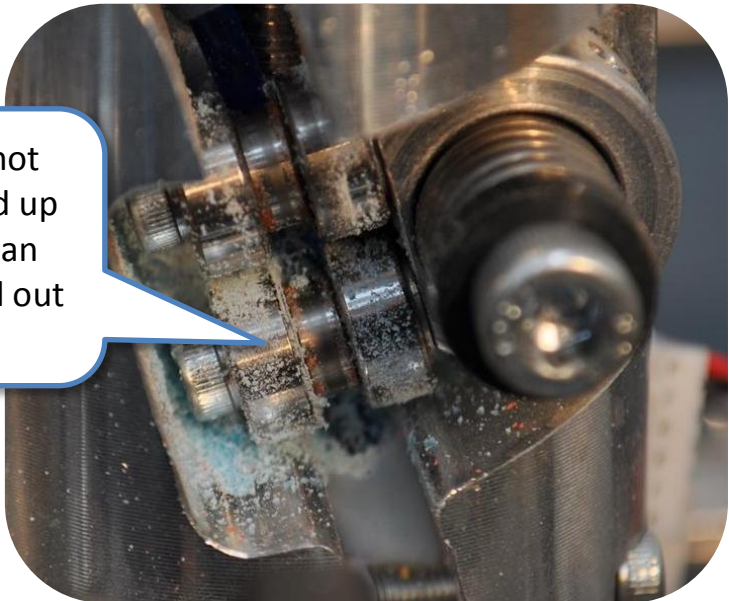

If the nozzle is not extruding, a build up of plastic dust can indicate a ground out filament.



Remove pressure bearing



Cut filament using side cutters

- Heat extruder to melt plastic using “Extruder control”, page 37.



Remove loaded section using pliers

- Examine the removed filament to confirm the cause:

Ground-out section

Normal drive shaft teeth marks





- Reload the filament, as per “Load the extruders” (page 31) taking care to prepare the tip of the filament as specified.



9.5.6 Handling snapped filament in the delivery tube

If filament snaps in more than one place in the delivery tube, the tube needs to be flushed of any trapped broken sections before the filament can be reloaded.

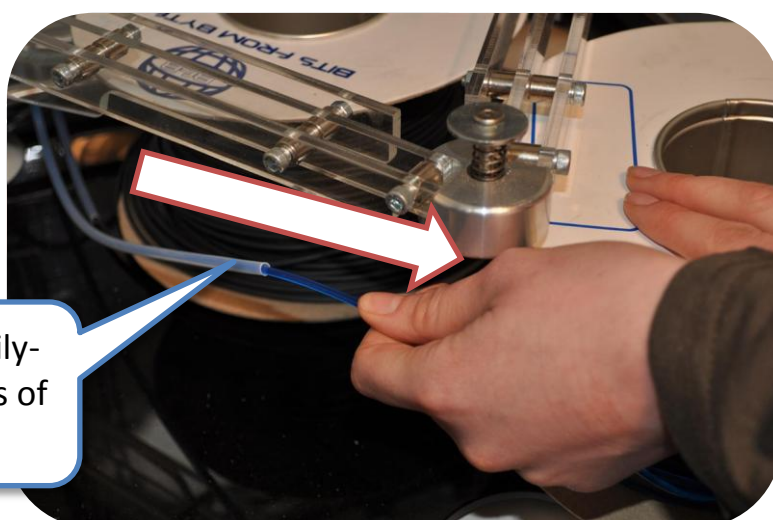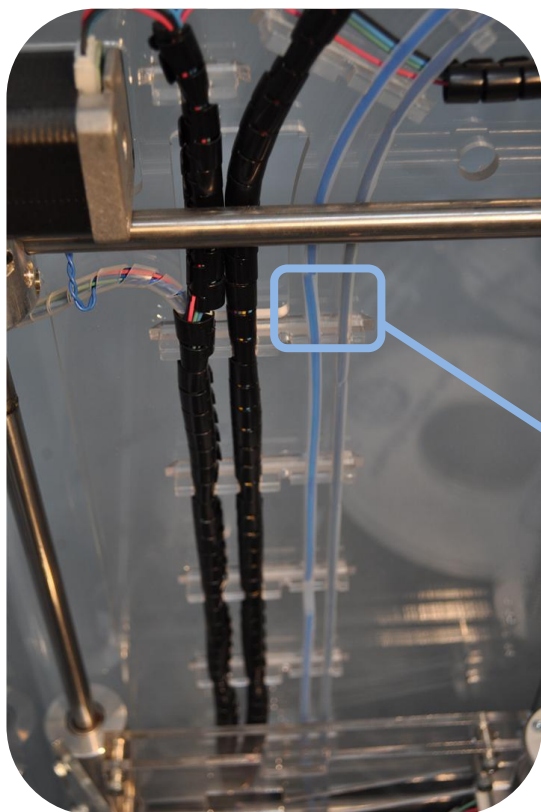

Remove all readily-available sections of filament



9.5.7 Also remove filament from extruder end, as per “Setting the extruder pressure bearings

The pressure bearing pushes the filament into the extruder drive shaft. In turn, the drive shaft pushes the filament through the hot-end.

The pressure bearing setting is critical to the extrusion process during a print. It is essential to test this setting when first using the printer.



Over-tightening the pressure bearing will over-deform the filament and it will jam in the nozzle tube.




Under-tightening the pressure bearing will not engage the filament with the extruder drive shaft, therefore the filament will not be driven through the nozzle.

- Prepare the extruder for a purge as detailed in “Purge the extruder” (page 38).



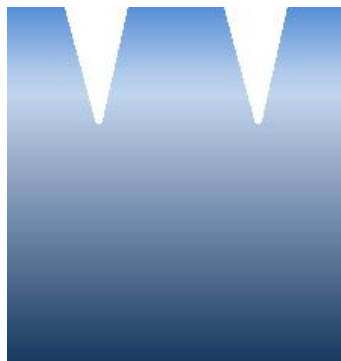
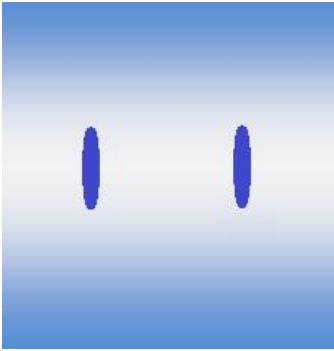
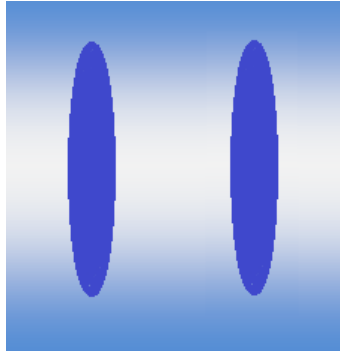
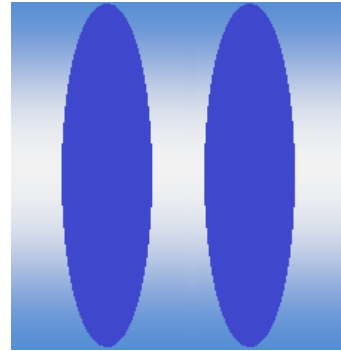


- Purge the extruder for 10 minutes.
- Now pull out the filament from the nozzle and examine the bite marks left on the filament from the extruder drive shaft. Compare this with the chart below.

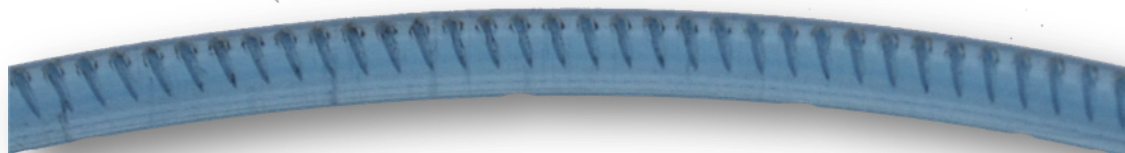

- Once the correct pressure bearing setting is established it should be used for each print (this procedure does not need to be repeated before each print).

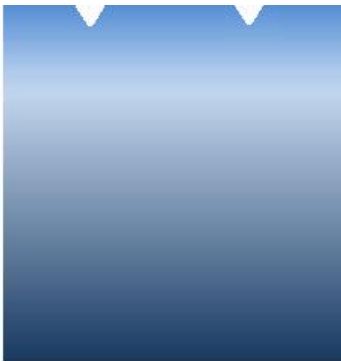


Pressure bearing setting	TOO LOOSE	OK	TOO TIGHT
Bite mark	Small	Medium	Large
Side view of filament			
Top view of filament			
Potential problem	Filament may disengage from extruder drive shaft during print.	OK	Filament diameter may excessively deform during print and jam in the nozzle tube during a print.
Solution	Tighten pressure	OK	Loosen pressure bearing




	bearing		
--	---------	--	--

- Handling a ground-out filament”, page 64.


Unclip delivery tube from back panel at all points

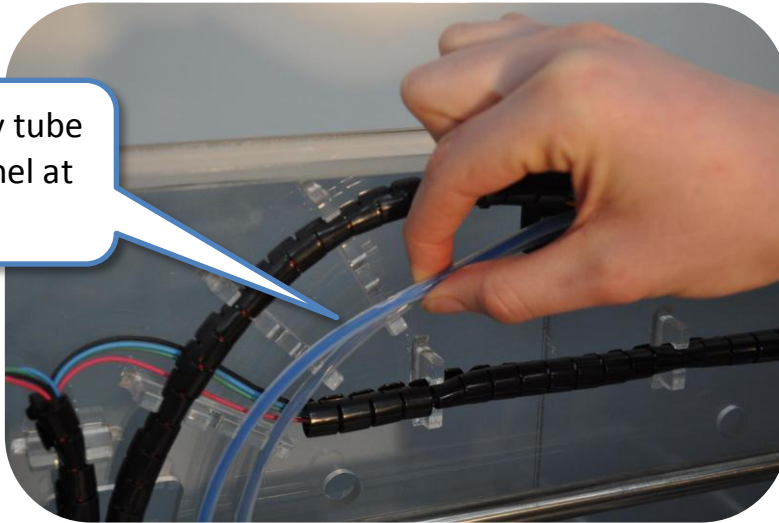

Pull out delivery tube full out of bottom bracket

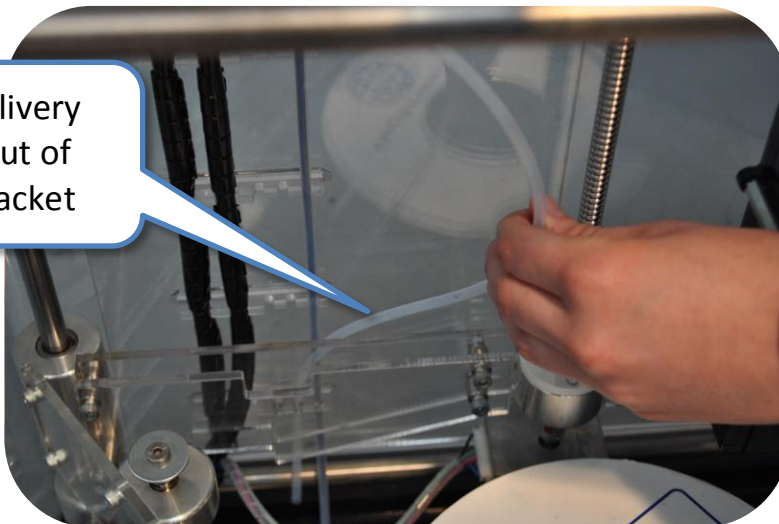


Bring delivery tube up to top of the machine

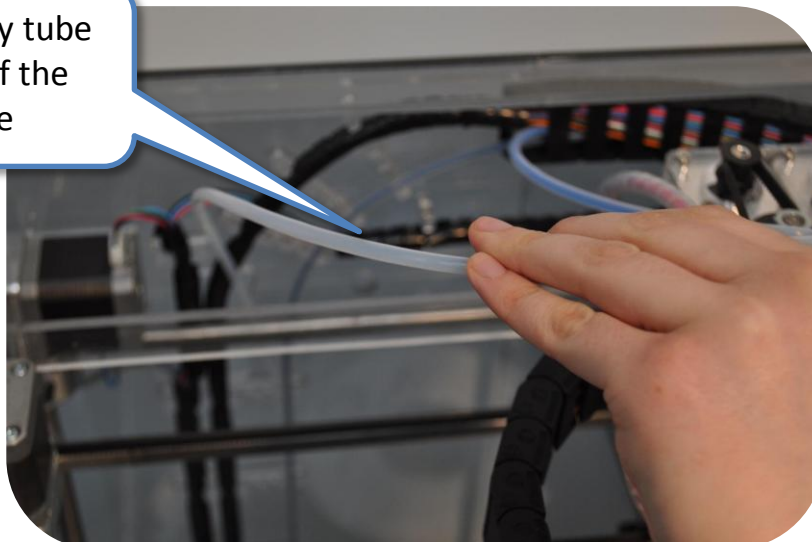




Pull delivery tube out of the energy chain from extruder end completely removing it from the machine

Energy chain

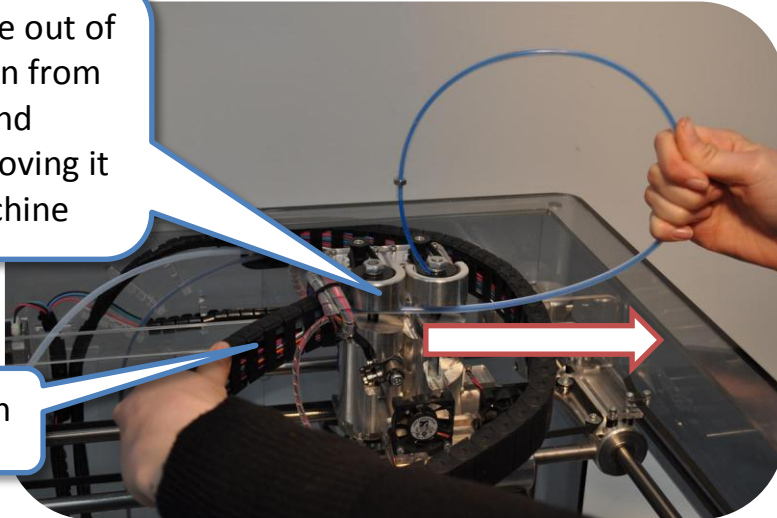


Prepare an end of filament from the reel – rounding the edges as per standard filament loading procedure (page 31)

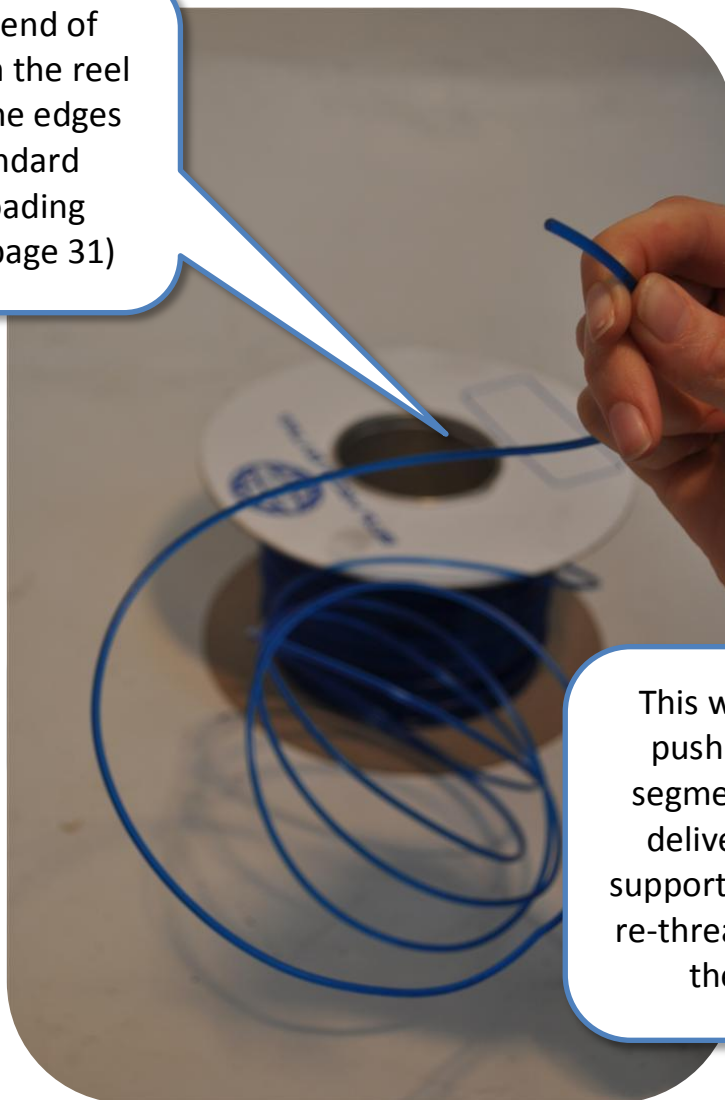


This will be used to push any trapped segments out of the delivery tube, and support the tube when re-threading back into the machine




Push reel filament down delivery tube, from the nut end

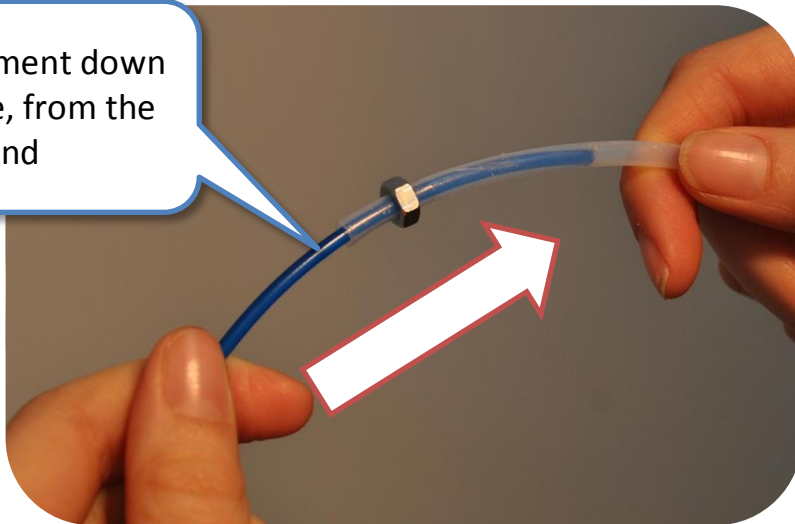


Hold tube in a coil to match the natural bend of the filament, making it easier to push out the trapped segments of filament.

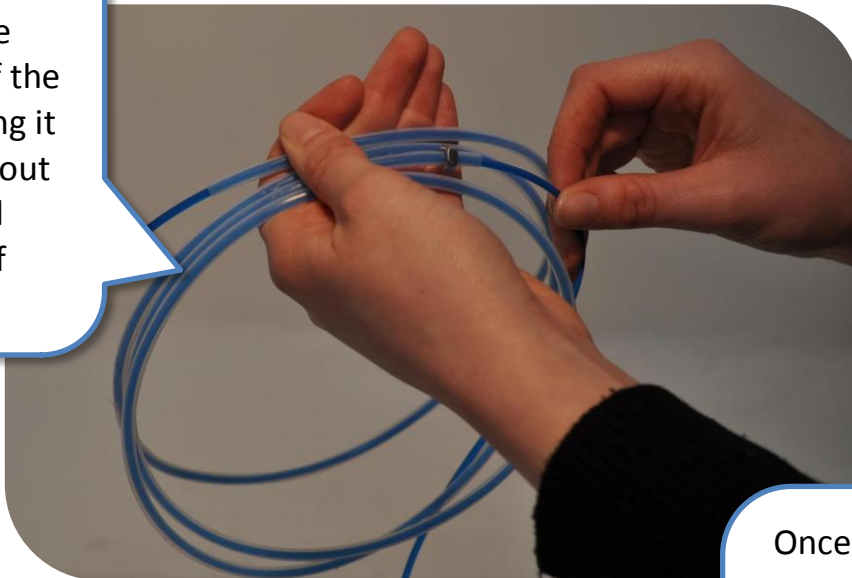


Once all the trapped segments have been pushed out, continue to push the reel filament through so that approximately 5 cm protrudes at both ends. Then cut the reel filament to detach the arrangement from the reel.

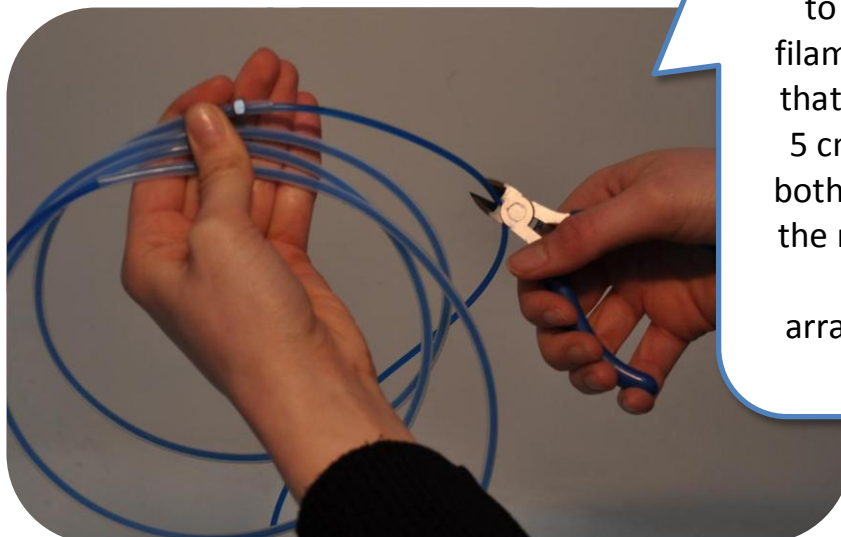

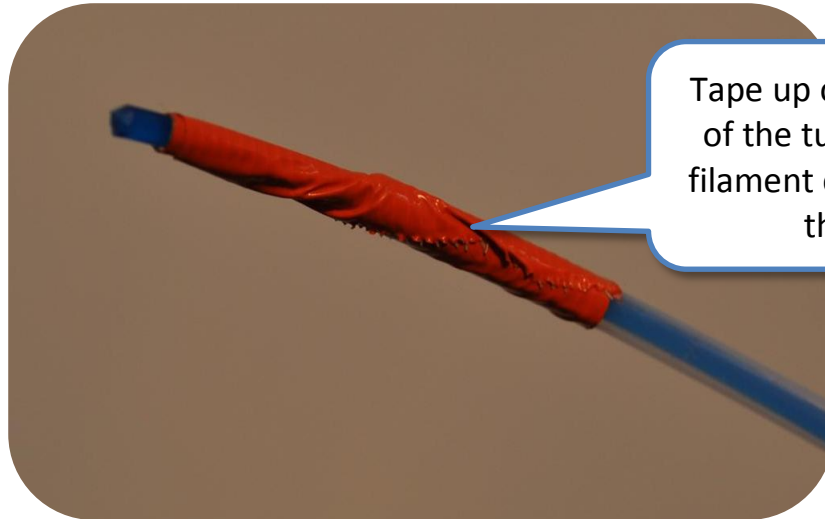



Tape up on non-nut end of the tube so that the filament cannot move in the tube.

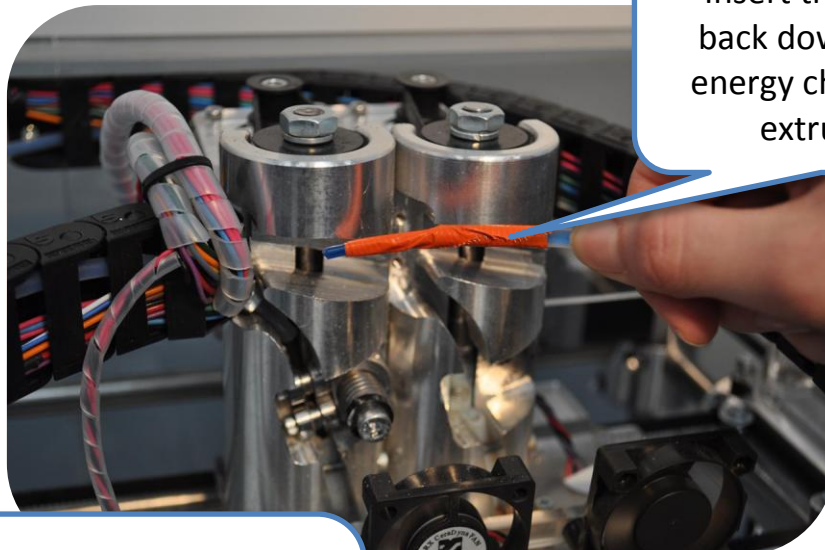


Insert the taped end back down inside the energy chain from the extruder end

Push the tube all the way back down the energy chain. You may need to move the extruders around to massage the tube through.

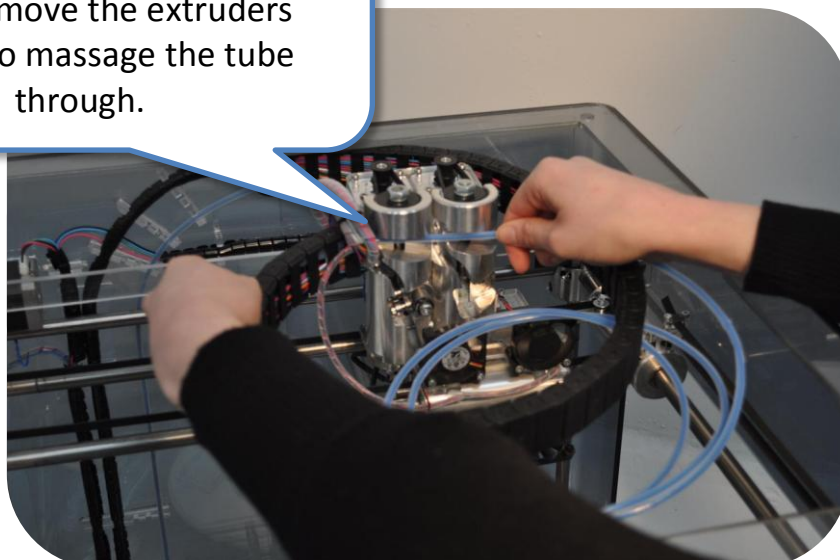

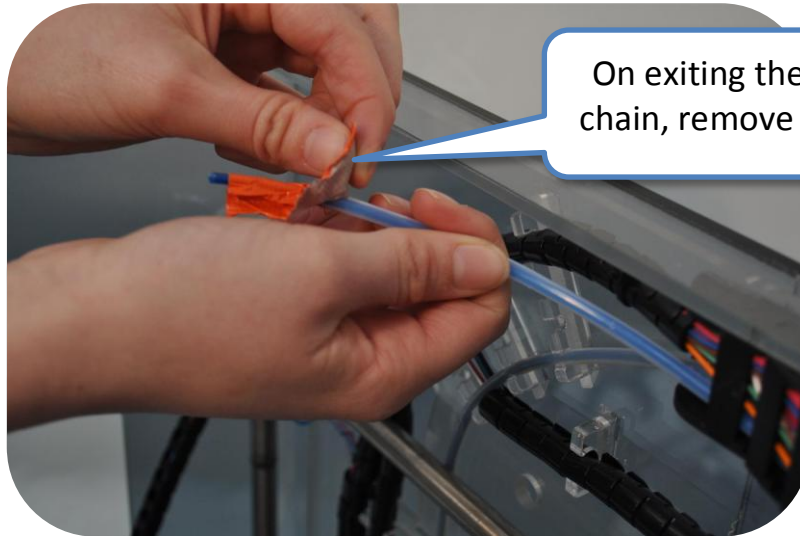


On exiting the energy chain, remove the tape

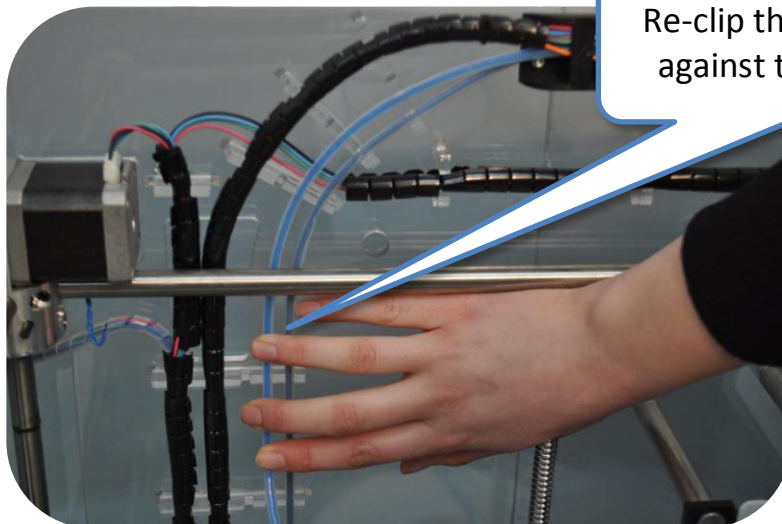


Re-clip the delivery tube against the back panel



Run the delivery tube under the second steel bar at the back of the machine.

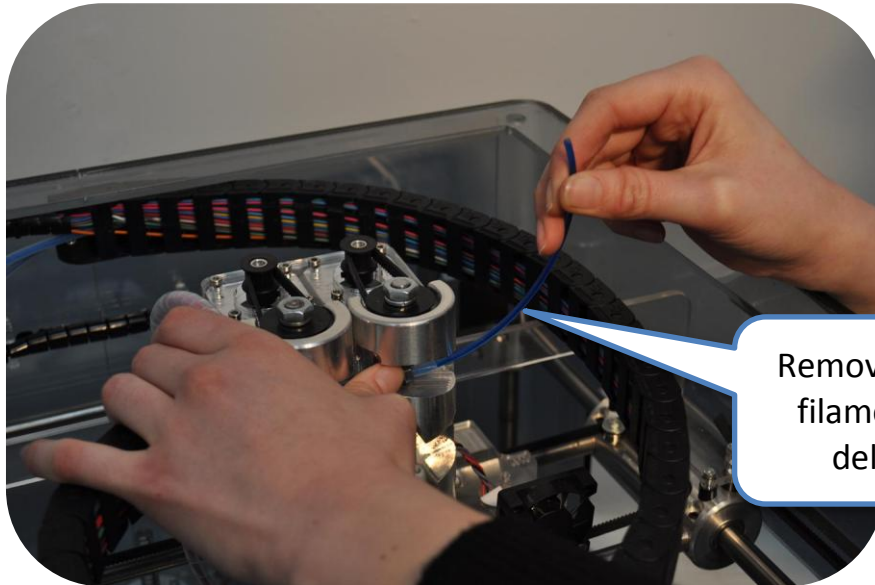

Remove the support filament from the delivery tube

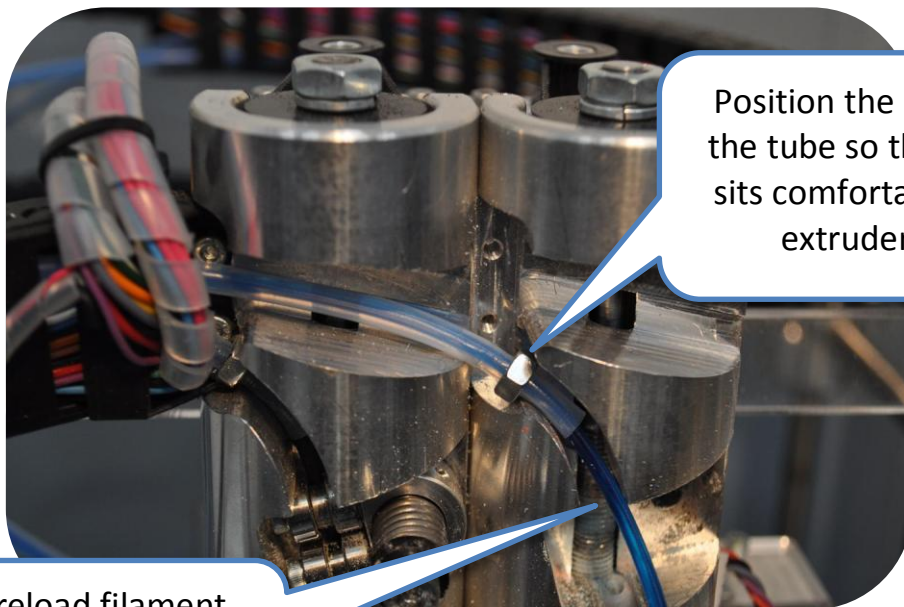

Position the nut-end of the tube so that the nut sits comfortably on the extruder body

Finally, reload filament, as "Load the filament", page 31



9.6 Troubleshooting

- Please visit our website at www.bitsfrombytes.com to use our troubleshooting guides.
- Please visit our website at www.bitsfrombytes.com to raise a support ticket.

9.7 Specifications

Please visit our website at www.bitsfrombytes.com to view specification sheets on the BFB-3000.